



# Docking Station

Installation Guide



## **Use of Materials Limitations**

International Currency Technologies Corporation (ICT) all rights reserved.  
All materials contained are the copyrighted property of ICT.  
All trademarks, service marks, and trade names are proprietary to ICT.

ICT reserves the right at all times to disclose or to modify any information as ICT deems necessary to satisfy any applicable law, regulation, legal process or governmental request, or to edit, refuse to post or to remove any information or materials, in whole or in part, in ICT's sole discretion.

## *Contents*

1. Specifications .....	1
2. Dimension .....	1
3. Tool Installation & Functions .....	2
4. Tool Operation.....	8
5. Maintenance .....	12

## 1. Specifications

### Operation Environment

Operation Temperature: 0°C~50°C  
 Storage Temperature: -30°C~70°C  
 Humidity: 30%~95%RH  
 (no condensation)



**Installation: Indoor use only!!**

## 2. Dimension

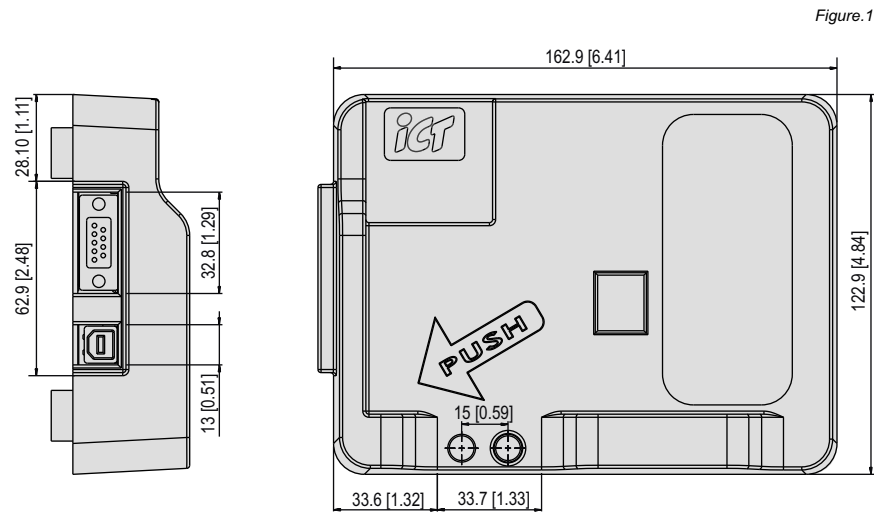


Figure.1

Unit:mm [inch]

## 3. Tool Installation & Functions

- Please install the three driver files as below before operation:
  - BDE Driver
  - USB Driver
  - Docking Station Tool

**\*Note:** Please confirm for the latest tool version on [www.ictgroup.com.tw](http://www.ictgroup.com.tw).

- Connect through USB or RS232.
  - For USB : Connect USB connector to PC.
  - For RS232 : Connect USB to PC as power supply.

 


Figure.2

- Execute Docking Station Tool, and login. (For the first time to login, please revise administrator password <Security/ Password>)



Figure.3

**\*Default:**  
 For administrators- User ID :Admini  
 Password :Admini  
 For users- User ID :Guest  
 Password : Guest

4. After logging in, the account will be shown on the title bar (ex. Admin).

**Functions:**

- a. Save File
- b. COM Setup
- c. Security Setup
- d. Bill Box Setup (Admin Only)
- e. Read Tool Version
- f. Logout
- g. Docking Station Status
- h. Manual Connection
- i. Read Deal Records
- j. Delete Single Deal Records
- k. Status

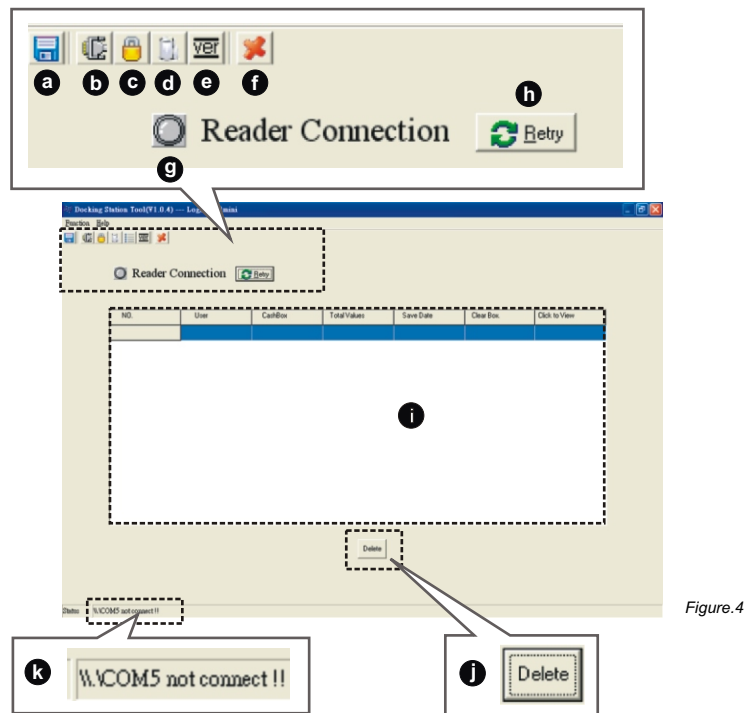


Figure.4



5. **“Save File”**: Save files as “.csv”.

6. **“COM Setup”**:

Setup COM 1~COM 20, and set the Reader Baud Rate as 9600.  
For USB users, please make sure the USB COM port before setup.

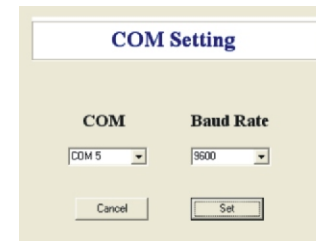


Figure.5



7. **“Security Setup”**:

For administrators-  
To setup password and authority, create and delete account.

For users-  
To setup passwords.

**\*Note: 6 codes limited for account and password.**

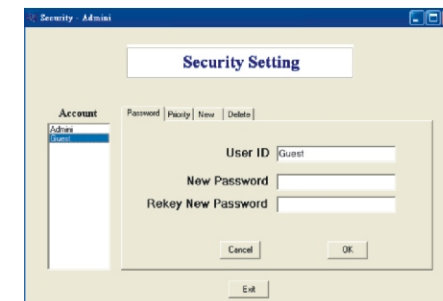


Figure.6



8. "Bill Box Setup" (Admin Only):

For administrators to re-name the bill box.

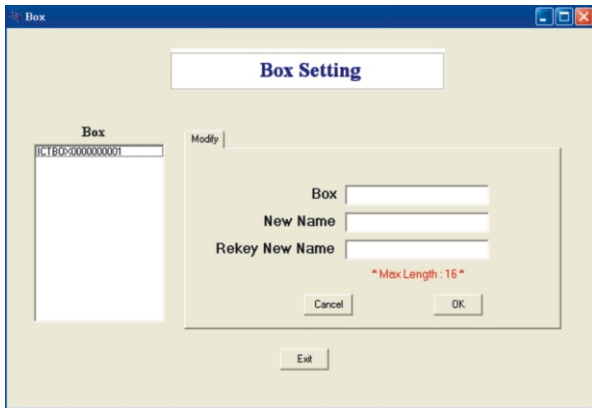


Figure.7



9. User Definition: To read/ write the user definition data.

(15 blocks total, 16 bytes for each block).

**\*Note: Please make sure Docking Station is well connected first.**

**Functions:**

- a. Open definition file (.csv).
- b. Save definition file (.csv).
- c. Read all data (15 blocks) from RFID.
- d. Write all data (15 blocks) to RFID.
- e. Define the name by users (8 digits maximum).
- f. Read/ write the hexadecimal data 0x0~0xFF. (Ex. To write in FA instead of 0xFA).
- g. Read the data of single block.
- h. Write the data of single block.
- i. Status

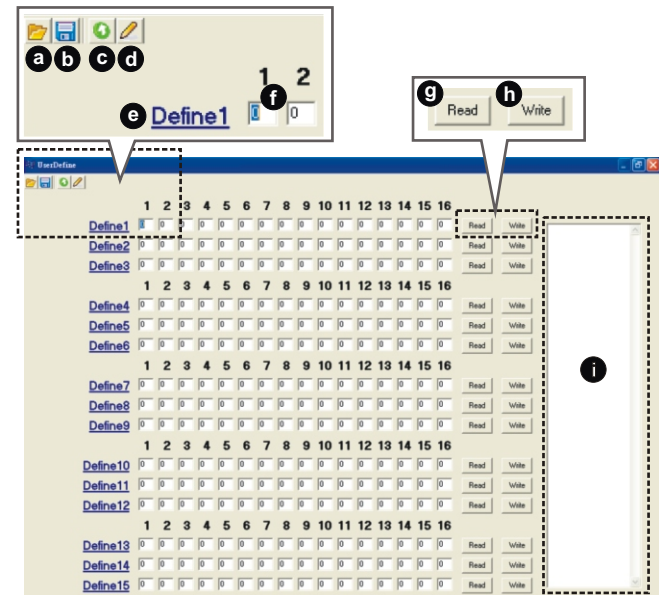


Figure.8



10. **“Tool Version”**:  
Read Tool Version.

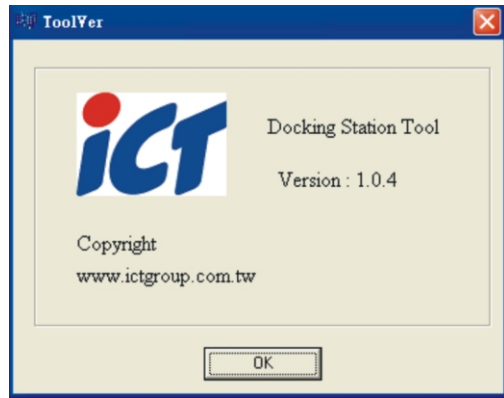


Figure.9



11. **“Logout”**:  
Login from another account.

12. **“Docking Station Status” (LED)**:  
Stays Green - Standby  
Flashes Green- Reading  
Stays Red - Reading Error

13. **“Buzzer Status”**:  
One Buzz - Reading  
Two Buzzes- Reading Succeed.

## 4. Tool Operation

1. When docking station is connected, and a bill box is installed on the docking station, it will be detected automatically for data reading.

**\*Note: To prevent the data error, please do not remove bill box or disconnect docking station when data reading.**


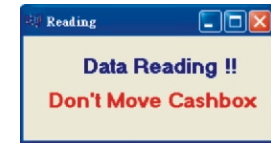


Figure.11

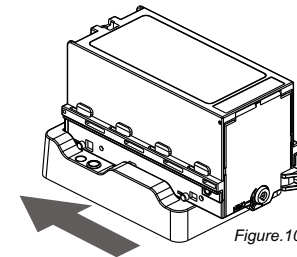

2. To install the bill box for the first time:  
(1). Name the bill box.

**\*Note: 16 codes limited for the name.**

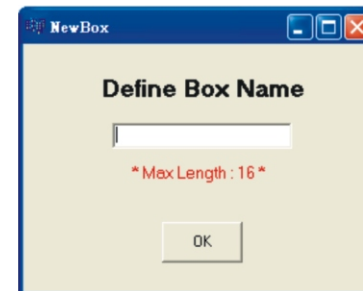


Figure.12

**\*The defined name will not be saved if users close the window. To rename the bill box, please re-install bill box again.**



(2). Clear bill box data or add new data.

**A. Bill Box with Data-**

Select whether to clear data in bill box or not.

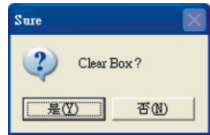


Figure.13

- a. Click on [YES] to clear data.  
Please do not remove bill box during the procedure.
- b. Click on [NO] to add a new data.



Figure.14

**B. No Data in Bill Box-**

Select whether to add data in bill box or not.

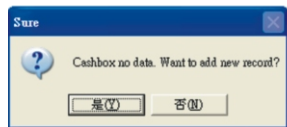


Figure.15

- a. Click on [YES] to add a new data.

 


Figure.16

- b. Click on [NO] to not add any new data.



3. To install the bill box from the second time on:  
Clear bill box data or add new data.

**A. Bill Box with Data-**

Select whether to save the data again or not.

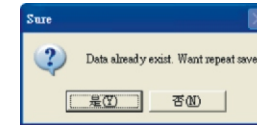


Figure.17

- a. Click on [YES] to save the data.



Figure.18

- b. Click on [NO] to go back to mainscreen.

**B. No Data in Bill Box-**

Select whether to add data in bill box or not.

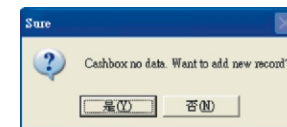


Figure.19

- a. Click on [YES] to add a new data.



Figure.20

- b. Click on [NO] to not add any new data.



4. Double click on deal record to read the data.

**Ex. Bill box ID, dealing amount or bill numbers.**

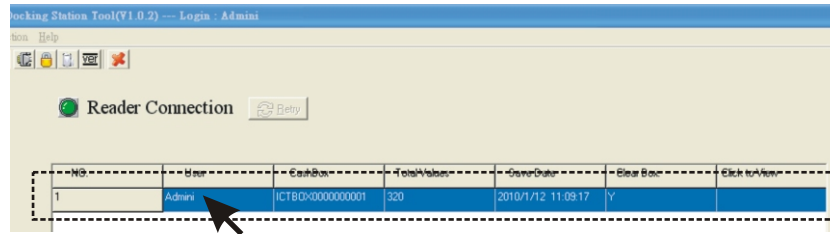


Figure.21

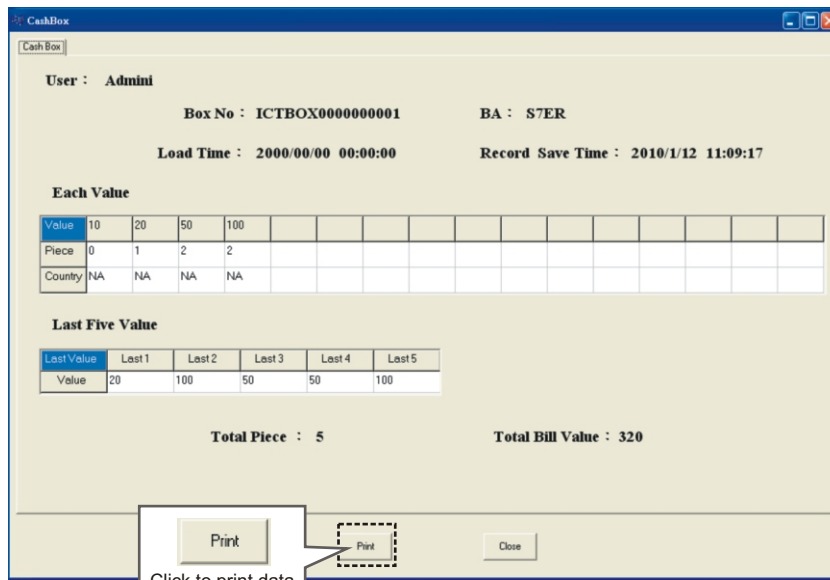


Figure.22

The tool figures are not necessary from the latest tool version, for correct figures, please refer to the latest tool version issued by ICT SW.

## 5. Maintenance

To make sure docking station always works smoothly, please use a soft, dry cloth or towel to clean the surface and LED regularly.

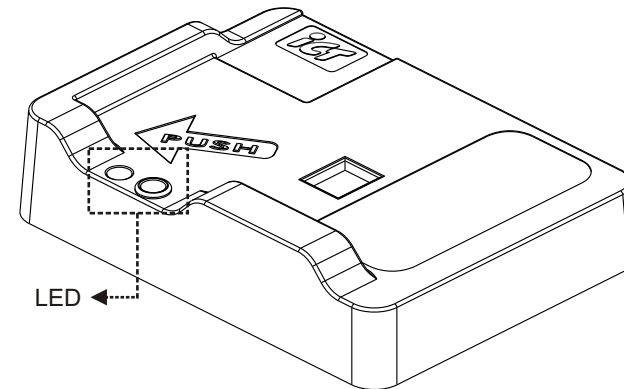


Figure.23

Maintenance Notice					
	<table border="1"> <tr> <td>Recommended</td> <td>Mild, non-abrasive, soap water.</td> </tr> <tr> <td>DO NOT USE</td> <td>Organic solvent , Alcohol, Volatility liquid.</td> </tr> </table>	Recommended	Mild, non-abrasive, soap water.	DO NOT USE	Organic solvent , Alcohol, Volatility liquid.
Recommended	Mild, non-abrasive, soap water.				
DO NOT USE	Organic solvent , Alcohol, Volatility liquid.				





**International Currency Technologies Corporation**

Ji-Hong Building, No 24, Alley 38, Lane 91, Nei-hu Rd., Sec. 1, Taipei, Taiwan, R.O.C.

Tel: 886-2-2797-1238 · Fax: 886-2-2797-1634

sales@ictgroup.com.tw (For Sales) · rma@ictgroup.com.tw (For Customer Service)

Website: [www.ictgroup.com.tw](http://www.ictgroup.com.tw)