

KRW3

NK77 DIP SWITCHES SETTING : 1(Pulse/Parallel)

Supported bill ₩ 1000, 5000, 10000 3bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10	
Special one pulse mode (Note 1)	OFF	OFF	OFF	OFF							
★ 1 Pulse / ₩ 1000	ON	OFF	OFF	OFF							
2 Pulse / ₩ 1000	OFF	ON	OFF	OFF							
3 Pulse / ₩ 1000	ON	ON	OFF	OFF							
4 Pulse / ₩ 1000	OFF	OFF	ON	OFF							
5 Pulse / ₩ 1000	ON	OFF	ON	OFF							
6 Pulse / ₩ 1000	OFF	ON	ON	OFF							
7 Pulse / ₩ 1000	ON	ON	ON	OFF							
8 Pulse / ₩ 1000	OFF	OFF	OFF	ON							
9 Pulse / ₩ 1000	ON	OFF	OFF	ON							
10 Pulse / ₩ 1000	OFF	ON	OFF	ON							
11 Pulse / ₩ 1000	ON	ON	OFF	ON							
12 Pulse / ₩ 1000	OFF	OFF	ON	ON							
13 Pulse / ₩ 1000	ON	OFF	ON	OFF							
14 Pulse / ₩ 1000	OFF	ON	ON	ON							
15 Pulse / ₩ 1000	ON	ON	ON	ON							
★ Accept ₩ 1000					ON						
Reject ₩ 1000					OFF						
★ Accept ₩ 5000							ON				
Reject ₩ 5000							OFF				
★ Accept ₩ 10000									ON		
Reject ₩ 10000									OFF		
Fast output Pulse Lo= 50ms Hi=100ms									ON		
★ Slow output Pulse Lo=100ms Hi=200ms									OFF		
★ Pulse Mode											ON
Parallel Mode											OFF
Ignore Sensor Problem (Note 2)											ON
★ Acknowledge Sensor Problem (Note 3)											OFF

(★) Manufacture setting

Note : Please reset the bill acceptor after set the dip switch.

(Note 1) : 1 PULSE/ 1000 KRW

1 PULSE/ 5000 KRW

1 PULSE/10000 KRW

In mode, only one dipswitch (SW5/SW6/SW7) can be on; otherwise, banknotes will be rejected.

(Note 2) : Sensor 3 problem occurred⇒BA will be still in working order.

(Note 3) : BA will stop to work when it acknowledges Sensor 3 problem occurred.

