

PA7-U-BRL6

PA7-U Option Switch Settings: 1

Supported bill BRL 2, 5, 10, 20, 50, 100 6bills.

PA7-U dip-switch settings and functions:

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
★	Reject BRL 2	ON											
★	Accept BRL 2	OFF											
★	Reject BRL 5 & 10		ON										
★	Accept BRL 5 & 10		OFF										
★	Reject BRL 20			ON									
★	Accept BRL 20			OFF									
★	Reject BRL 50				ON								
★	Accept BRL 50				OFF								
★	Reject BRL 100					ON							
★	Accept BRL 100					OFF							
★	Reserved						ON						
★	Reserved						OFF						
★	Harness Disable							ON					
★	Harness Enable							OFF					
★	Inhibit Active High								ON				
★	Inhibit Active Low								OFF				
★	1 pulse / BRL 1									OFF	OFF		
★	2 pulse / BRL 1									ON	OFF		
★	4 pulse / BRL 1									OFF	ON		
★	20 pulse / BRL 1									ON	ON		
★	Pulse Speed	50ms LO / 50ms HI										OFF	OFF
		60ms LO / 300ms HI										ON	OFF
		30ms LO / 50ms HI										OFF	ON
		150ms LO / 150ms HI										ON	ON

★ Manufacture setting

◆ Note : (1) Reset the bill acceptor after setting the dip switch.

(2) SW7 and SW8 of the 8-switch DIP and the 4-switch DIP are for pulse protocol only.

PA7-U-BRL6(Pulse/NISR/RS232/5V Enable)

Remove the front cover and the dip-switch is on the CPU board.

PA7-U Interface Settings: 2 (Pulse)

	INTERFACE	SW1	SW2	SW3	SW4
★	Credit-Pulse Normal HIGH	ON			
	Credit-Pulse Normal LOW	OFF			
★	Pulse Mode		ON	ON	
	NISR Mode		OFF	ON	
	RS232 Mode (RS232 Port / USB Port)		ON	OFF	
	5V Enable Mode		OFF	OFF	
★	Reserved				ON
					OFF

★ Manufacture setting

PA7-U Interface Settings: 4 (RS232)

	INTERFACE	SW1	SW2	SW3	SW4
★	Reserved	ON			
		OFF			
	Pulse Mode		ON	ON	
	NISR Mode		OFF	ON	
★	RS232 Mode (RS232 Port / USB Port)		ON	OFF	
	5V Enable Mode		OFF	OFF	
★	Reserved				ON
					OFF

★ Manufacture setting

PA7-U Interface Settings: 3 (NISR)

	INTERFACE	SW1	SW2	SW3	SW4
★	Send ERROR CODE	ON			
	No ERROR CODE	OFF			
	Pulse Mode		ON	ON	
★	NISR Mode		OFF	ON	
	RS232 Mode (RS232 Port / USB Port)		ON	OFF	
	5V Enable Mode		OFF	OFF	
	Customized Mode				ON
★	Standard Mode				OFF

★ Manufacture setting

PA7-U Interface Settings: 5 (5V Enable)

	INTERFACE	SW1	SW2	SW3	SW4
★	Credit-Pulse Normal HIGH	ON			
	Credit-Pulse Normal LOW	OFF			
	Pulse Mode		ON	ON	
	NISR Mode		OFF	ON	
	RS232 Mode (RS232 Port / USB Port)		ON	OFF	
★	5V Enable Mode		OFF	OFF	
★	Reserved				ON
					OFF

★ Manufacture setting

Currency Assign Data

Interface Bill value	ICT	NISR	Pulse	5V Enable
BV1	BRL 2		BRL 2	BRL 2
BV2	BRL 5	BRL 2	BRL 5	BRL 5
BV3	BRL 10	BRL 5	BRL 10	BRL 10
BV4	BRL 20	BRL 10	BRL 20	BRL 20
BV5	BRL 50	BRL 20	BRL 50	BRL 50
BV6	BRL 100	BRL 50	BRL 100	BRL 100
BV7		BRL 100		