

## PA7-U/PV7 Option Switch Settings: 1

Supported bill N\$ 10, 20, 50, 100, 200 5 bills.

PA7-U/PV7 dip-switch settings and functions:

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
★	Reject N\$ 10	ON											
★	Accept N\$ 10	OFF											
★	Reject N\$ 20		ON										
★	Accept N\$ 20		OFF										
★	Reject N\$ 50			ON									
★	Accept N\$ 50			OFF									
★	Reject N\$ 100				ON								
★	Accept N\$ 100				OFF								
★	Reject N\$ 200					ON							
★	Accept N\$ 200					OFF							
★	Manufacture Default						ON						
★	System Default						OFF						
★	Harness Disable							ON					
★	Harness Enable							OFF					
★	Inhibit Active High								ON				
★	Inhibit Active Low								OFF				
★	1 pulse / N\$ 10									OFF	OFF		
★	2 pulse / N\$ 10									ON	OFF		
★	4 pulse / N\$ 10									OFF	ON		
★	20 pulse / N\$ 10									ON	ON		
★	Pulse Speed	50ms on / 50ms off									OFF	OFF	
		60ms on / 300ms off									ON	OFF	
		30ms on / 50ms off									OFF	ON	
		150ms on / 150ms off									ON	ON	

★ Manufacture setting

◆ Note : (1) Reset the bill acceptor after setting the dip switch.

(2) SW7 and SW8 of the 8-switch DIP and the 4-switch DIP are for pulse protocol only.

Remove the front cover and the dip-switch is on the CPU board.

### PA7-U Interface Settings: 2 (Pulse)

	INTERFACE	SW1	SW2	SW3	SW4
★	Credit-Pulse Normal HIGH	ON			
	Credit-Pulse Normal LOW	OFF			
★	Pulse Mode		ON	ON	
	NISR Mode		OFF	ON	
	RS232 Mode (RS232 Port / USB Port)		ON	OFF	
	5V Enable Mode		OFF	OFF	
★	Reserved				ON
					OFF

★ Manufacture setting

### PA7-U Interface Settings: 4 (RS232)

	INTERFACE	SW1	SW2	SW3	SW4
★	Reserved	ON			
		OFF			
	Pulse Mode		ON	ON	
	NISR Mode		OFF	ON	
★	RS232 Mode (RS232 Port / USB Port)		ON	OFF	
	5V Enable Mode		OFF	OFF	
★	Reserved				ON
					OFF

★ Manufacture setting

### PA7-U Interface Settings: 3 (NISR)

	INTERFACE	SW1	SW2	SW3	SW4
★	Reserved	ON			
		OFF			
	Pulse Mode		ON	ON	
★	NISR Mode		OFF	ON	
	RS232 Mode (RS232 Port / USB Port)		ON	OFF	
	5V Enable Mode		OFF	OFF	
★	Reserved				ON
					OFF

★ Manufacture setting

### PA7-U Interface Settings: 5 (5V Enable)

	INTERFACE	SW1	SW2	SW3	SW4
★	Credit-Pulse Normal HIGH	ON			
	Credit-Pulse Normal LOW	OFF			
	Pulse Mode		ON	ON	
	NISR Mode		OFF	ON	
★	RS232 Mode (RS232 Port / USB Port)		ON	OFF	
	5V Enable Mode		OFF	OFF	
★	Reserved				ON
					OFF

★ Manufacture setting

### PV7 Interface Settings: 2 (Pulse)

	INTERFACE	SW1	SW2	SW3	SW4
★	Credit-Pulse Normal HIGH	ON			
	Credit-Pulse Normal LOW	OFF			
★	Pulse Mode		ON	ON	
	MDB Mode		OFF	ON	
	RS232 Mode		ON	OFF	
★	Reserved				ON
					OFF

★ Manufacture setting

### PV7 Interface Settings: 4 (RS232)

	INTERFACE	SW1	SW2	SW3	SW4
★	Reserved	ON			
		OFF			
	Pulse Mode		ON	ON	
	MDB Mode		OFF	ON	
★	RS232 Mode		ON	OFF	
★	Reserved				ON
					OFF

★ Manufacture setting

### PV7 Interface Settings: 3 (MDB)

	INTERFACE	SW1	SW2	SW3	SW4
★	Reserved	ON			
		OFF			
	Pulse Mode		ON	ON	
★	MDB Mode		OFF	ON	
	RS232 Mode		ON	OFF	
★	Credit Converting Mode 1 (Note.A)				ON
	Credit Converting Mode 2 (Note.B)				OFF

★ Manufacture setting

◆ (Note. A) Mode 1: To output the credit which is the same as the input bill.

(Note. B) Mode 2: To output the credit which is 1/10 of the input bill.