

XBA mini-NPR5

XBA mini Option Switch Settings: 1(Pulse/MDB/JPSTD/ICT104V/ICT104U)

Supported bill NPR 5, 10, 20, 50, 100 5bills.

XBA mini dip-switch settings and functions:

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
★	Reject NPR 5	ON											
★	Accept NPR 5	OFF											
★	Reject NPR 10		ON										
★	Accept NPR 10		OFF										
★	Reject NPR 20			ON									
★	Accept NPR 20			OFF									
★	Reject NPR 50				ON								
★	Accept NPR 50				OFF								
★	Reject NPR 100				ON								
★	Accept NPR 100				OFF								
★	Disable Bill Reject 4 Times BA Stop By 30 Sec					ON							
★	Enable Bill Reject 4 Times BA Stop By 30 Sec					OFF							
★	Stack Banknote when Power-up							ON					
★	Reject Banknote when Power-up							OFF					
★	Reserved								ON				
★	Reserved								OFF				
★	Inhibit Active High								ON				
★	Inhibit Active Low								OFF				
★	Reserved									ON			
★	Reserved									OFF			
★	Interface Timing Conversion	50ms LO / 50ms HI									OFF	OFF	
		60ms LO / 300ms HI									ON	OFF	
		30ms LO / 50ms HI									OFF	ON	
		150ms LO / 150ms HI									ON	ON	

★ Manufacture setting

After setting dip switch of the credit pulses,you should reset the bill acceptor again.

Note : (1) Calibration card is needed.

XBA mini-NPR5(Pulse/MDB/JPSTD/ICT104V/ICT104U)

Interface Settings: 2(Pulse)

	INTERFACE	SW1	SW2	SW3	SW4
★	Credit-Pulse Normal HIGH	ON			
	Credit-Pulse Normal LOW	OFF			
★	Pulse Mode		ON		
	Other Mode		OFF		
★	1 pulse / NPR 5			OFF	OFF
	2 pulses / NPR 5			OFF	ON
	4 pulses / NPR 5			ON	OFF
	20 pulses / NPR 5			ON	ON

★ Manufacture setting

Interface Settings: 2(MDB)

	FUNCTION	SW1	SW2	SW3	SW4
★	Scaling Factor (SF) = 100	ON			
	Decimal Point Position (DPP) = 2				
	Scaling Factor (SF) = 1	OFF			
	Decimal Point Position (DPP) = 0				
	Pulse Mode		ON		
★	Other Mode		OFF		
★	MDB Mode			OFF	OFF
	JPSTD Mode			OFF	ON
	ICT104U Mode			ON	OFF
	ICT104V Mode			ON	ON

★ Manufacture setting

Interface Settings: 2(Other)

	FUNCTION	SW1	SW2	SW3	SW4
	Reserved	ON			
★	Reserved	OFF			
	Pulse Mode		ON		
★	Other Mode		OFF		
	MDB Mode			OFF	OFF
	JPSTD Mode			OFF	ON
	ICT104U Mode			ON	OFF
	ICT104V Mode			ON	ON

★ Manufacture setting

Interface Settings: 2(ICT104V)

	FUNCTION	SW1	SW2	SW3	SW4
★	Connect with coin changer	ON			
	Connect with ICT JPSTD Converter board	OFF			
	Pulse Mode		ON		
★	Other Mode		OFF		
	MDB Mode			OFF	OFF
	JPSTD Mode			OFF	ON
	ICT104U Mode			ON	OFF
★	ICT104V Mode			ON	ON

★ Manufacture setting

Currency Assign Data

Interface Bill value	JPSTD	ICT104U	ICT104V	Pulse	MDB
BV1	NPR 5	NPR 5	NPR 5	NPR 5	NPR 5
BV2		NPR 10	NPR 10	NPR 10	NPR 10
BV3		NPR 20	NPR 20	NPR 20	NPR 20
BV4		NPR 50	NPR 50	NPR 50	NPR 50
BV5		NPR 100	NPR 100	NPR 100	NPR 100