

XBA mini-JOD1

XBA mini Option Switch Settings: 1(Pulse/MDB/JPSTD/ICT104U/ICT104V)

Supported bill JOD 1 1bills.

XBA mini dip-switch settings and functions:

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
Reject JOD 1	ON											
★ Accept JOD 1	OFF											
Reserved		ON										
★ Reserved		OFF										
Reserved			ON									
★ Reserved			OFF									
Reserved				ON								
★ Reserved				OFF								
Reserved					ON							
★ Reserved					OFF							
Disable Bill Reject 4 Times BA Stop By 30 Sec						ON						
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF						
Stack Banknote when Power-up							ON					
★ Reject Banknote when Power-up							OFF					
Reserved								ON				
★ Reserved								OFF				
Inhibit Active High									ON			
★ Inhibit Active Low									OFF			
Reserved										ON		
★ Reserved										OFF		
★ Interface Timing Conversion		50ms LO / 50ms HI									OFF	OFF
		60ms LO / 300ms HI									ON	OFF
		30ms LO / 50ms HI									OFF	ON
		150ms LO / 150ms HI									ON	ON

★ Manufacture setting

Note : (1) After setting dip switch of the credit pulses,you should reset the bill acceptor again.
(2)Calibration card is needed.

XBA mini-JOD1(Pulse/MDB/JPSTD/ICT104V/ICT104U)

Interface Settings: 2(Pulse)

INTERFACE	SW1	SW2	SW3	SW4
★ Credit-Pulse Normal HIGH	ON			
Credit-Pulse Normal LOW	OFF			
★ Pulse Mode		ON		
Other Mode		OFF		
★ 1 pulse / JOD 1			OFF	OFF
2 pulses / JOD 1			OFF	ON
4 pulses / JOD 1			ON	OFF
20 pulses / JOD 1			ON	ON

★ Manufacture setting

Interface Settings: 2(MDB)

FUNCTION	SW1	SW2	SW3	SW4
★ Scaling Factor (SF) = 100	ON			
Decimal Point Position (DPP) = 2				
Scaling Factor (SF) = 1	OFF			
Decimal Point Position (DPP) = 0				
Pulse Mode		ON		
★ Other Mode		OFF		
★ MDB Mode			OFF	OFF
JPSTD Mode			OFF	ON
ICT104U Mode			ON	OFF
ICT104V Mode			ON	ON

★ Manufacture setting

Interface Settings: 2(Other)

FUNCTION	SW1	SW2	SW3	SW4
★ Reserved	ON			
Reserved	OFF			
Pulse Mode		ON		
★ Other Mode		OFF		
MDB Mode			OFF	OFF
JPSTD Mode			OFF	ON
ICT104U Mode			ON	OFF
ICT104V Mode			ON	ON

★ Manufacture setting

Interface Settings: 2(ICT104V)

FUNCTION	SW1	SW2	SW3	SW4
★ Connect with coin changer	ON			
Connect with ICT JPSTD Converter board	OFF			
Pulse Mode		ON		
★ Other Mode		OFF		
MDB Mode			OFF	OFF
JPSTD Mode			OFF	ON
ICT104U Mode			ON	OFF
★ ICT104V Mode			ON	ON

★ Manufacture setting

Currency Assign Data

Interface Bill value	JPSTD	ICT104U	ICT104V	Pulse	MDB
BV1	JOD 1	JOD 1	JOD 1	JOD 1	JOD 1