
## XBA-CZK4 Option Switch Settings Supported bill CZK 100, 200, 500, 1000 4bills.

		_							
	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
	Reject CZK 100	ON							
*	Accept CZK 100	OFF							
	Reject CZK 200		ON						
*	Accept CZK 200		OFF						
	Reject CZK 500			ON					
*	Accept CZK 500			OFF					
	Reject CZK 1000				ON				
*	Accept CZK 1000				OFF				
	Reserved					ON			
*	Reserved	OF							
	Disable Bill Reject 4 Times BA Stop By 30 Sec	ON							
*	Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
	Stack Banknote when Power-up							ON	
*	Reject Banknote when Power-up	-1						OFF	
	Reserved								
*	Reserved								OFF

This dip switch is located at the side of XBA.

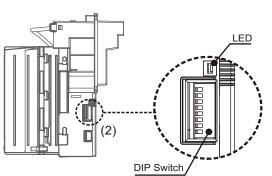


## **Currency Assign Data**

Interface Bill value	ICT104U	GPT	ICT104V	Pulse	MDB
BV1	100	100	100	100	100
BV2	200	200	200	200	200
BV3	500	500	500	500	500
BV4	1000	1000	1000	1000	1000

## XBA-CZK4 (Pulse/MDB/ICT104U/GPT/ICT104V)

1											
	FUNCTION	SW1	SW2	SW3	SW4		SW5		SW6	SW7	SW8
	Inhibit Active HIGH	ON									
*	Inhibit Active LOW	OFF									
	Reserved		ON								
*	Reserved		OFF								
	Reserved			ON							
*	Reserved			OFF							
	Reserved				ON						
*	Reserved				OFF			_			
	Pulse Mode	MDB Mode				ICT104					
*	Credit-Pulse Normal HIGH	Scaling Factor (SF) = 1 Decimal Point Position (DF)			PP) = 2	Connect with coin changer C					
	Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP)				Connect with ICT VCCS converter board					
*	Pulse Mode								ON		
	Other Mode								OFF		
	Pulse Mode	Other Mode									
*	1 pulse / CZK100	MDB Mode			Mode					OFF	OFF
	2 pulse / CZK100	GPT Mode								OFF	ON
	5 pulse / CZK100	ICT104U Mode								ON	OFF
	20 pulse / CZK100	ICT104V Mode								ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

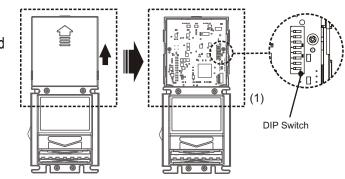

## ★ Manufacture setting

Note: 1.After setting dip switch of the credit pulses, you should reset the bill acceptor again. 2.Calibraion card is not needed.