


XBA-TWD4 Option Switch Settings

Supported bill \$ 100, 200, 500, 1000 4bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject TWD 100	ON							
★ Accept TWD 100	OFF							
★ Reject TWD 200		ON						
★ Accept TWD 200		OFF						
★ Reject TWD 500			ON					
★ Accept TWD 500			OFF					
★ Reject TWD 1000				ON				
★ Accept TWD 1000				OFF				
Reserved					ON			
Reserved					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★ Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
Reserved								ON
★ Reserved								OFF

This dip switch is located at the side of XBA.

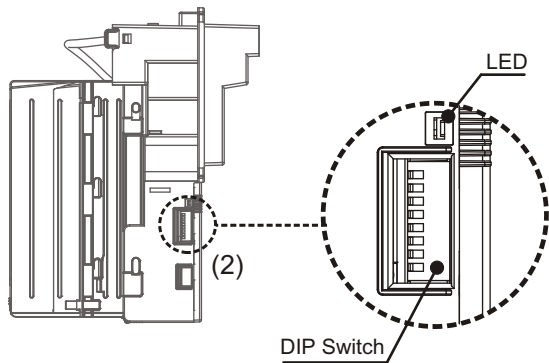


Currency Assign Data

Interface	ICT104U	ICT104V	Pulse	MDB
BV1	TWD 100	TWD 100	TWD 100	TWD 100
BV2	TWD 200	TWD 200	TWD 200	TWD 200
BV3	TWD 500	TWD 500	TWD 500	TWD 500
BV4	TWD 1000	TWD 1000	TWD 1000	TWD 1000

XBA-TWD4 (Pulse/MDB/ICT104U/ICT104V)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
Inhibit Active HIGH	ON							
★ Inhibit Active LOW	OFF							
Reserved		ON						
★ Reserved		OFF						
Reserved			ON					
★ Reserved			OFF					
Reserved				ON				
★ Reserved				OFF				
Pulse Mode	MDB Mode		ICT104V Mode					
★ Credit-Pulse Normal HIGH	Scaling Factor (SF)= 100 Decimal Point Position (DPP)= 2		Connect with coin changer			ON		
Credit-Pulse Normal LOW	Scaling Factor (SF)= 1 Decimal Point Position (DPP)= 0		Connect with ICT VCCS converter board			OFF		
★ Pulse Mode						ON		
Other Mode						OFF		
Pulse Mode	Other Mode							
★ 1 pulse / TWD 100	MDB Mode						OFF	OFF
5 pulse / TWD 100	Reserved						OFF	ON
10pulse / TWD 100	ICT104U Mode						ON	OFF
25pulse / TWD 100	ICT104V Mode						ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

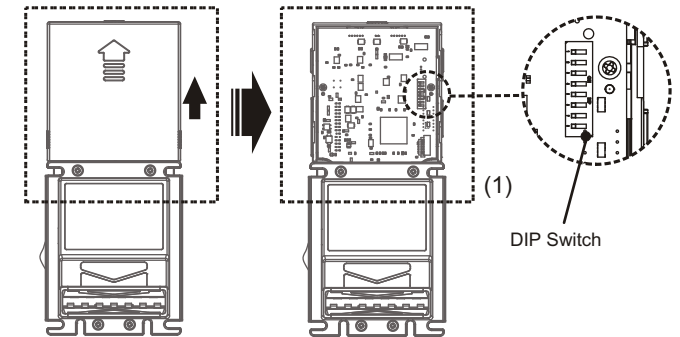

★ Manufacture setting

Note : 1.Calibration card is needed.