


XBA-UAH7 Option Switch Settings

Supported bill UAH 5, 10, 20, 50, 100, 200, 500 7bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject H 5	ON							
★ Accept H 5	OFF							
★ Reject H 10		ON						
★ Accept H 10		OFF						
★ Reject H 20 & 50			ON					
★ Accept H 20 & 50			OFF					
★ Reject H 100 & 200				ON				
★ Accept H 100 & 200				OFF				
★ Reject H 500					ON			
★ Accept H 500					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec					ON			
★ Enable Bill Reject 4 Times BA Stop By 30 Sec					OFF			
★ Stack Banknote when Power-up						ON		
★ Reject Banknote when Power-up						OFF		
★ Reserved							ON	
★ Reserved							OFF	

This dip switch is located at the side of XBA.

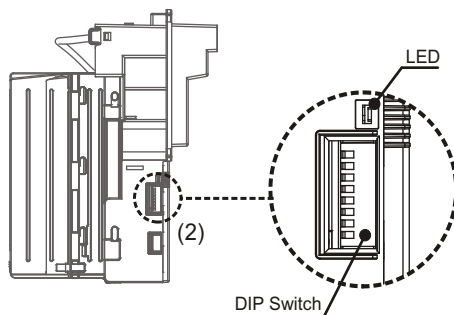

Currency Assign Data

Interface Bill value	ICT104U	GPT	ICT104V	Pulse		MDB
				When Dip 1 is ON	When Dip 1 is OFF	
BV1	5	5	5	5	5	5
BV2	10	10	10	10	10	10
BV3	20	20	20	20	20	20
BV4	50	50	50	50	50	50
BV5	100		100	100	100	100
BV6	200		200	200	200	200
BV7	500		500	500	500	500

XBA-UAH7 (Pulse/MDB/ICT104U/GPT/ICT104V)

FUNCTION		SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	
★	Inhibit Active HIGH	ON								
	Inhibit Active LOW	OFF								
★	Reserved									ON
	Reserved									OFF
★	Reserved			ON						
	Reserved			OFF						
★	Reserved									ON
	Reserved									OFF
Pulse Mode		MDB Mode			ICT104V Mode					
★	Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2			Connect with coin changer	ON				
	Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0			Connect with ICT VCCS converter board	OFF				
★	Pulse Mode						ON			
	Other Mode						OFF			
★	Pulse Mode					Other Mode				
	1 pulse / H 5(Dip 1: OFF) : H 10(Dip 1: ON)					MDB Mode		OFF	OFF	
	5 pulse / H 5(Dip 1: OFF) : H 10(Dip 1: ON)					GPT Mode		OFF	ON	
	10 pulse / H 5(Dip 1: OFF) : H 10(Dip 1: ON)					ICT104U Mode		ON	OFF	
	25 pulse / H 5(Dip 1: OFF) : H 10(Dip 1: ON)					ICT104V Mode		ON	ON	

★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note : 1.Please reset the bill acceptor after set the dip switch.

2.Dip switches 1 to 5 are only used for pulse protocol.

3.calibrate card.

4.Pulse Mode:

When Dip 1 is OFF,One Pulse per 5 H

When Dip 1 is ON, One Pulse per 10 H

This dip switch is located on the CPU board, remove the CPU board cover first.

