

ROL2

P70/P5 DIP SWITCHES SETTING : 1(Pulse/RS232 A1)

Supported bill Lei 1, 5

2 bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10
★	1 Pulse / Lei 5	OFF	OFF	OFF							
	2 Pulses / Lei 5	OFF	OFF	ON							
	3 Pulses / Lei 5	OFF	ON	OFF							
	4 Pulses / Lei 5	OFF	ON	ON							
	5 Pulses / Lei 5	ON	OFF	OFF							
	10 Pulses / Lei 5	ON	OFF	ON							
	20 Pulses / Lei 5	ON	ON	OFF							
	100 Pulses / Lei 5	ON	ON	ON							
	Fast output Pulse Lo= 50ms Hi=100ms				ON						
★	Slow output Pulse Lo= 50ms Hi=300ms				OFF						
	Inhibit level Active Low				ON						
★	Inhibit level Active High				OFF						
★	Accept Lei 1				ON						
	Reject Lei 1				OFF						
★	Accept Lei 5				ON						
	Reject Lei 5				OFF						
	Reserved				ON						
★	Reserved				OFF						
	Reserved				ON						
★	Reserved				OFF						
	Reserved				ON						
★	Reserved				OFF						

★ Manufacture setting

P70-ROL2/P5(Pulse/RS232 A1)

DIP SWITCHES SETTING : 2(Pulse)

	FUNCTION	SW1	SW2	SW3	SW4
★	Credit-Pulse Normal HIGH	ON			
	Credit-Pulse Normal LOW	OFF			
★	Pulse Mode		ON		
	RS232 A1 Mode		OFF		
	Reserved			ON	
★	Reserved			OFF	
	Manufacture Default (Note 1)				ON
★	System Default (Note 2)				OFF

★ Manufacture setting

DIP SWITCHES SETTING : 2(RS232 A1)

	FUNCTION	SW1	SW2	SW3	SW4
★	Reserved	ON			
	Reserved	OFF			
	Pulse Mode		ON		
★	RS232 A1 Mode		OFF		
	Reserved			ON	
★	Reserved			OFF	
	Manufacture Default (Note 1)				ON
★	System Default (Note 2)				OFF

★ Manufacture setting

Note: (1) Sensor 6 problem occurred ==>> BA will be still in working order.

(The face LED will be Flashing in short green about 2 seconds everytime you restart BA.)

(2) BA will stop to work when it acknowledges Sensor 6 problem occurred.

(The face LED will be flashing in red.)