



KAZ6

P77/P5 DIP SWITCHES SETTING : 1(Pulse/M.D.B)

Supported bill KZT 200, 500, 1000, 2000, 5000, 10000
6bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10
★	1 Pulse / KZT 100	OFF	OFF	OFF							
	2 Pulse / KZT 100	OFF	OFF	ON							
	3 Pulse / KZT 100	OFF	ON	OFF							
	4 pulse / KZT 100	OFF	ON	ON							
	5 Pulse / KZT 100	ON	OFF	OFF							
	10 Pulse / KZT 100	ON	OFF	ON							
	20 Pulse / KZT 100	ON	ON	OFF							
	100 Pulse / KZT 100	ON	ON	ON							
	Fast output Pulse	Lo= 50ms Hi=100ms			ON						
★	Slow output Pulse	Lo= 50ms Hi=300ms			OFF						
	Inhibit level Active Low				ON						
★	Inhibit level Active High				OFF						
★	Accept KZT 200					ON					
	Reject KZT 200					OFF					
★	Accept KZT 500						ON				
	Reject KZT 500						OFF				
★	Accept KZT 1000							ON			
	Reject KZT 1000							OFF			
★	Accept KZT 2000								ON		
	Reject KZT 2000								OFF		
★	Accept KZT 5000 & 10000									ON	
	Reject KZT 5000 & 10000									OFF	

★ Manufacture setting

- Note: (1) Please reset the bill acceptor after set the dip switch.
(2) Dip switches 1 to 5 are only used for pulse protocol.

DIP SWITCHES SETTING : 2(Pulse)

	FUNCTION	SW1	SW2	SW3	SW4
★	Pulse Normal High	ON			
	Pulse Normal Low	OFF			
★	Pulse Mode		ON		
	M.D.B Interface		OFF		
	Harness Disable			ON	
★	Harness Enable			OFF	
	Ignore Sensor Problem (Note 1)				ON
★	Acknowledge Sensor Problem (Note 2)				OFF

★ Manufacture setting

Note : (1) Sensor 6 problem occurred ==>> BA will be still in working order.

(The face LED will be flashing in short green about 2 seconds everytime you restart BA.)

(2) BA will stop working when it acknowledges Sensor 6 problem occurred.

(The face LED will be flashing in red.)

DIP SWITCHES SETTING : 3(M.D.B)

	FUNCTION	SW1	SW2	SW3	SW4
	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0	ON			
★	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2	OFF			
	Pulse Mode		ON		
★	M.D.B Interface		OFF		
	Reserved			ON	
★					OFF
	Ignore Sensor Problem (Note 1)				ON
★	Acknowledge Sensor Problem (Note 2)				OFF

★ Manufacture setting

Note : (1) Sensor 6 problem occurred ==>> BA will be still in working order.

(The face LED will be flashing in short green about 2 seconds everytime you restart BA.)

(2) BA will stop working when it acknowledges Sensor 6 problem occurred.

(The face LED will be flashing in red.)