



KRW3

P77/P5 DIP SWITCHES SETTING : 1(Pulse/ICT005)

Supported bill ₩ 1000, 5000, 10000 3bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10	
★	1 Pulse / ₩ 1000	OFF	OFF	OFF								
	2 Pulse / ₩ 1000	OFF	OFF	ON								
	3 Pulse / ₩ 1000	OFF	ON	OFF								
	4 pulse / ₩ 1000	OFF	ON	ON								
	5 Pulse / ₩ 1000	ON	OFF	OFF								
	10 Pulse / ₩ 1000	ON	OFF	ON								
	20 Pulse / ₩ 1000	ON	ON	OFF								
	100 Pulse / ₩ 1000	ON	ON	ON								
	Fast output Pulse <small>Lo= 50ms Hi=100ms</small>											ON
★	Slow output Pulse <small>Lo=100ms Hi=200ms</small>											OFF
	Inhibit level Active Low				ON							
★	Inhibit level Active High				OFF							
★	Accept ₩ 1000				ON							
	Reject ₩ 1000				OFF							
★	Accept ₩ 5000				ON							
	Reject ₩ 5000				OFF							
★	Accept ₩ 10000				ON							
	Reject ₩ 10000				OFF							
★	Reserved				ON							
					OFF							
					ON							
★					OFF							

★ Manufacture setting

Note: (1) Please reset the bill acceptor after set the dip switch.

(2) Dip switches 1 to 5 are only used for pulse protocol.

DIP SWITCHES SETTING : 2(Pulse)

	FUNCTION	SW1	SW2	SW3	SW4
★	Pulse Normal High	ON			
	Pulse Normal Low	OFF			
★	Pulse Protocol		ON		
	ICT005 Protocol		OFF		
	Harness Disable			ON	
★	Harness Enable			OFF	
	Ignore Sensor Problem (Note 1)				ON
★	Acknowledge Sensor Problem (Note 2)				OFF

★ Manufacture setting

Note : (1) Sensor 6 problem occurred ==>> BA will be still in working order.

(The face LED will be flashing in short green about 2 seconds everytime you restart BA.)

(2) BA will stop to work when it acknowledges Sensor 6 problem occurred.

(The face LED will be flashing in red.)

DIP SWITCHES SETTING : 3(ICT005)

	FUNCTION	SW1	SW2	SW3	SW4
★	Reserved	ON			
		OFF			
	Pulse Protocol		ON		
★	ICT005 Protocol		OFF		
★	Reserved			ON	
				OFF	
	Ignore Sensor Problem (Note 1)				ON
★	Acknowledge Sensor Problem (Note 2)				OFF

★ Manufacture setting

Note : (1) Sensor 6 problem occurred ==>> BA will be still in working order.

(The face LED will be flashing in short green about 2 seconds everytime you restart BA.)

(2) BA will stop to work when it acknowledges Sensor 6 problem occurred.

(The face LED will be flashing in red.)