



CZK7

P85/P5 DIP SWITCHES SETTING : 1(Pulse/ccTalk)

Supported bill CZK 50, 100, 200, 500, 1000,
2000, 5000 7bills.

<CZK 5000 is not taken by P85 Stacker>

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10
★	1 Pulse / CZK 50	OFF	OFF	OFF							
	2 Pulse / CZK 50	OFF	OFF	ON							
	3 Pulse / CZK 50	OFF	ON	OFF							
	4 Pulse / CZK 50	OFF	ON	ON							
	5 Pulse / CZK 50	ON	OFF	OFF							
	10 Pulse / CZK 50	ON	OFF	ON							
	20 Pulse / CZK 50	ON	ON	OFF							
	100 Pulse / CZK 50	ON	ON	ON							
	Fast output Pulse <small>Lo= 50ms Hi=100ms</small>				ON						
★	Slow output Pulse <small>Lo= 50ms Hi=300ms</small>				OFF						
	Inhibit level Active Low				ON						
★	Inhibit level Active High				OFF						
★	Accept CZK 50 & 100				ON						
	Reject CZK 50 & 100				OFF						
★	Accept CZK 200 & 500				ON						
	Reject CZK 200 & 500				OFF						
★	Accept CZK 1000				ON						
	Reject CZK 1000				OFF						
★	Accept CZK 2000				ON						
	Reject CZK 2000				OFF						
★	Accept CZK 5000				ON						
	Reject CZK 5000				OFF						

★ Manufacture setting

Note: (1) Please reset the bill acceptor after set the dip switch.

(2) Dip switches 1 to 5 are only used for pulse protocol.

P85-CZK7/P5(Pulse/ccTalk)

DIP SWITCHES SETTING : 2(Pulse)

	FUNCTION	SW1	SW2	SW3	SW4
★	Pulse Normal High	ON			
	Pulse Normal Low	OFF			
★	Pulse Mode		ON		
	ccTalk Interface		OFF		
	Reserved			ON	
★	Reserved			OFF	
	Ignore Sensor Problem(Note 1)				ON
★	Acknowledge Sensor Problem(Note 2)				OFF

★ Manufacture setting

Note:(1) Sensor 6 problem occurred ==>> BA will be still in working order.

(The face LED will be Flashing in short green about 2 seconds everytime you restart BA.)

(2) BA will stop to work when it acknowledges Sensor 6 problem occurred.

(The face LED will be flashing in red.)

DIP SWITCHES SETTING : 2(ccTalk)

	FUNCTION	SW1	SW2	SW3	SW4
★	Pulse Normal High	ON			
	Pulse Normal Low	OFF			
	Pulse Mode		ON		
★	ccTalk Interface		OFF		
	Please see Note (3) for detail			ON	
				OFF	
	Ignore Sensor Problem(Note 1)				ON
★	Acknowledge Sensor Problem(Note 2)				OFF

★ Manufacture setting

Note:(1) Sensor 6 problem occurred ==>> BA will be still in working order.

(The face LED will be Flashing in short green about 2 seconds everytime you restart BA.)

(2) BA will stop to work when it acknowledges Sensor 6 problem occurred.

(The face LED will be flashing in red.)

(3) ccTalk Parameters Reset

Put this switch to on and reset power will restore the ccTalk address to its default value of 40 and the encryption key to its default value of 123456.

*This has to be done after finished calibration process.