

# XBA mini-EGP4

## XBA mini Option Switch Settings: 1(Pulse/MDB/JPSTD/ICT104V/ICT104U)

### Supported bill EGP 5, 10, 20, 50 4bills.

XBA mini dip-switch settings and functions:

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
★ Reject EGP 5	ON											
★ Accept EGP 5	OFF											
★ Reject EGP 10		ON										
★ Accept EGP 10		OFF										
★ Reject EGP 20			ON									
★ Accept EGP 20			OFF									
★ Reject EGP 50				ON								
★ Accept EGP 50				OFF								
Reserved					ON							
Reserved					OFF							
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON						
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF						
★ Stack Banknote when Power-up							ON					
★ Reject Banknote when Power-up							OFF					
Reserved								ON				
Reserved								OFF				
★ Inhibit Active High									ON			
★ Inhibit Active Low									OFF			
Reserved										ON		
Reserved										OFF		
★ Interface Timing Conversion	50ms LO / 50ms HI										OFF	OFF
	60ms LO / 300ms HI										ON	OFF
	30ms LO / 50ms HI										OFF	ON
	150ms LO / 150ms HI										ON	ON

★ Manufacture setting

After setting dip switch of the credit pulses,you should reset the bill acceptor again.

Note : (1) Calibration card is needed.

# XBA mini-EGP4(Pulse/MDB/JPSTD/ICT104V/ICT104U)

## Interface Settings: 2(Pulse)

INTERFACE	SW1	SW2	SW3	SW4
★ Credit-Pulse Normal HIGH	ON			
Credit-Pulse Normal LOW	OFF			
★ Pulse Mode		ON		
Other Mode		OFF		
★ 1 pulse / EGP 5			OFF	OFF
2 pulses / EGP 5			OFF	ON
5 pulses / EGP 5			ON	OFF
20 pulses / EGP 5			ON	ON

★ Manufacture setting

## Interface Settings: 2(MDB)

FUNCTION	SW1	SW2	SW3	SW4
★ Scaling Factor (SF) = 100	ON			
Decimal Point Position (DPP) = 2				
Scaling Factor (SF) = 1	OFF			
Decimal Point Position (DPP) = 0				
Pulse Mode		ON		
Other Mode		OFF		
★ MDB Mode			OFF	OFF
JPSTD Mode			OFF	ON
ICT104U Mode			ON	OFF
ICT104V Mode			ON	ON

★ Manufacture setting

## Interface Settings: 2(Other)

FUNCTION	SW1	SW2	SW3	SW4
★ Reserved	ON			
Reserved	OFF			
Pulse Mode		ON		
Other Mode		OFF		
MDB Mode			OFF	OFF
JPSTD Mode			OFF	ON
ICT104U Mode			ON	OFF
ICT104V Mode			ON	ON

★ Manufacture setting

## Interface Settings: 2(ICT104V)

FUNCTION	SW1	SW2	SW3	SW4
★ Connect with coin changer	ON			
Connect with ICT JPSTD Converter board	OFF			
Pulse Mode		ON		
Other Mode		OFF		
MDB Mode			OFF	OFF
JPSTD Mode			OFF	ON
ICT104U Mode			ON	OFF
★ ICT104V Mode			ON	ON

★ Manufacture setting

## Currency Assign Data

Interface Bill value	JPSTD	ICT104U	ICT104V	Pulse	MDB
BV1	EGP 5	EGP 5	EGP 5	EGP 5	EGP 5
BV2		EGP 10	EGP 10	EGP 10	EGP 10
BV3		EGP 20	EGP 20	EGP 20	EGP 20
BV4		EGP 50	EGP 50	EGP 50	EGP 50