

XBA mini-RUB6

XBA mini Option Switch Settings: 1(Pulse/MDB/JPSTD/ICT104V/ICT104U)

Supported bill RUB 50, 100, 200, 500, 1000, 2000 6bills.

XBA mini dip-switch settings and functions:

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
★ Reject RUB 50 & 100	ON											
★ Accept RUB 50 & 100	OFF											
★ Reject RUB 200		ON										
★ Accept RUB 200		OFF										
★ Reject RUB 500			ON									
★ Accept RUB 500			OFF									
★ Reject RUB 1000				ON								
★ Accept RUB 1000				OFF								
★ Reject RUB 2000					ON							
★ Accept RUB 2000					OFF							
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON						
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF						
★ Stack Banknote when Power-up							ON					
★ Reject Banknote when Power-up							OFF					
★ Reserved								ON				
★ Reserved								OFF				
★ Inhibit Active High									ON			
★ Inhibit Active Low									OFF			
★ Reserved										ON		
★ Reserved										OFF		
★ Interface Timing Conversion	50ms LO / 50ms HI										OFF	OFF
	60ms LO / 300ms HI										ON	OFF
	30ms LO / 50ms HI										OFF	ON
	150ms LO / 150ms HI										ON	ON

★ Manufacture setting

- Note : (1) After setting dip switch of the credit pulses,you should reset the bill acceptor again.
 (2) Please reset the bill acceptor after set the dip switch.
 (3) Dip switches 1 to 5 are only used for pulse protocol.
 (4) Calibration card is needed.
 (5) BV1 is reserve,JPSTD no support.

XBA mini-RUB6(Pulse/MDB/JPSTD/ICT104V/ICT104U)

Interface Settings: 2(Pulse)

INTERFACE	SW1	SW2	SW3	SW4
★ Credit-Pulse Normal HIGH	ON			
Credit-Pulse Normal LOW	OFF			
★ Pulse Mode		ON		
★ Other Mode		OFF		
★ 1 pulse / RUB 50			OFF	OFF
5 pulses / RUB 50			OFF	ON
10 pulses / RUB 50			ON	OFF
25 pulses / RUB 50			ON	ON

★ Manufacture setting

Interface Settings: 2(MDB)

FUNCTION	SW1	SW2	SW3	SW4
★ Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2	ON			
Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0	OFF			
Pulse Mode		ON		
★ Other Mode		OFF		
★ MDB Mode			OFF	OFF
JPSTD Mode			OFF	ON
ICT104U Mode			ON	OFF
ICT104V Mode			ON	ON

★ Manufacture setting

Interface Settings: 2(ICT104V)

INTERFACE	SW1	SW2	SW3	SW4
★ Connect with coin changer	ON			
Connect with ICT JPSTD converter board	OFF			
Pulse Mode		ON		
★ Other Mode		OFF		
MDB Mode			OFF	OFF
JPSTD Mode			OFF	ON
ICT104U Mode			ON	OFF
★ ICT104V Mode			ON	ON

★ Manufacture setting

Interface Settings: 2(Other)

INTERFACE	SW1	SW2	SW3	SW4
★ Reserved	ON			
Reserved	OFF			
Pulse Mode		ON		
★ Other Mode		OFF		
MDB Mode			OFF	OFF
JPSTD Mode			OFF	ON
ICT104U Mode			ON	OFF
ICT104V Mode			ON	ON

★ Manufacture setting

Currency Assign Data

Interface Bill value	JPSTD	ICT104U	ICT104V	Pulse	MDB
BV1					
BV2		RUB 50	RUB 50	RUB 50	RUB 50
BV3		RUB 100	RUB 100	RUB 100	RUB 100
BV4		RUB 500	RUB 500	RUB 500	RUB 500
BV5		RUB 1000	RUB 1000	RUB 1000	RUB 1000
BV6					
BV7		RUB 200	RUB 200	RUB 200	RUB 200
BV8		RUB 2000	RUB 2000	RUB 2000	RUB 2000