

XBA mini-TSR5

XBA mini Option Switch Settings: 1(Pulse/MDB/JPSTD/ICT104U/ICT104V)

Supported bill TSR 1, 5, 10, 25, 50 5bills.

XBA mini dip-switch settings and functions:

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
★ Reject TSR 1	ON											
★ Accept TSR 1	OFF											
★ Reject TSR 5		ON										
★ Accept TSR 5		OFF										
★ Reject TSR 10			ON									
★ Accept TSR 10			OFF									
★ Reject TSR 25				ON								
★ Accept TSR 25				OFF								
★ Reject TSR 50					ON							
★ Accept TSR 50					OFF							
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON						
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF						
★ Stack Banknote when Power-up							ON					
★ Reject Banknote when Power-up							OFF					
★ Reserved								ON				
★ Reserved								OFF				
★ Inhibit Active High									ON			
★ Inhibit Active Low									OFF			
★ Reserved										ON		
★ Reserved										OFF		
★ Interface Timing Conversion	50ms LO / 50ms HI										OFF	OFF
	60ms LO / 300ms HI										ON	OFF
	30ms LO / 50ms HI										OFF	ON
	150ms LO / 150ms HI										ON	ON

★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note : 1. Calibration card is needed

XBA mini-TSR5(Pulse/MDB/JPSTD/ICT104V/ICT104U)

Interface Settings: 2(Pulse)

INTERFACE	SW1	SW2	SW3	SW4
★ Credit-Pulse Normal HIGH	ON			
Credit-Pulse Normal LOW	OFF			
★ Pulse Mode		ON		
★ Other Mode		OFF		
★ 1 pulse / TSR 1			OFF	OFF
2 pulses / TSR 1			OFF	ON
5 pulses / TSR 1			ON	OFF
10 pulses / TSR 1			ON	ON

★ Manufacture setting

Interface Settings: 2(MDB)

FUNCTION	SW1	SW2	SW3	SW4
★ Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2	ON			
Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0	OFF			
Pulse Mode		ON		
★ Other Mode		OFF		
★ MDB Mode			OFF	OFF
JPSTD Mode			OFF	ON
ICT104U Mode			ON	OFF
ICT104V Mode			ON	ON

★ Manufacture setting

Interface Settings: 2(Other)

FUNCTION	SW1	SW2	SW3	SW4
★ Reserved	ON			
★ Reserved	OFF			
Pulse Mode		ON		
★ Other Mode		OFF		
MDB Mode			OFF	OFF
JPSTD Mode			OFF	ON
ICT104U Mode			ON	OFF
ICT104V Mode			ON	ON

★ Manufacture setting

Interface Settings: 2(ICT104V)

FUNCTION	SW1	SW2	SW3	SW4
★ Connect with coin changer	ON			
Connect with ICT JPSTD Converter board	OFF			
Pulse Mode		ON		
★ Other Mode		OFF		
MDB Mode			OFF	OFF
JPSTD Mode			OFF	ON
ICT104U Mode			ON	OFF
★ ICT104V Mode			ON	ON

★ Manufacture setting

Currency Assign Data

Interface Bill value	Pulse	MDB	ICT104U	ICT104V	JPSTD
BV1	TSR 1	TSR 1	TSR 1	TSR 1	TSR 1
BV2	TSR 5	TSR 5	TSR 5	TSR 5	
BV3	TSR 10	TSR 10	TSR 10	TSR 10	
BV4	TSR 25	TSR 25	TSR 25	TSR 25	
BV5	TSR 50	TSR 50	TSR 50	TSR 50	