# **XBA-42X Option Switch Settings**

# Supported bill

CNY 1, 5, 10, 20, 50, 100

6bills.

LAK 500, 1000, 2000, 5000, 10000, 20000, 50000, 100000

8bills. 4bills.


THB 20, 50, 100, 500

6bills.

USD 1, 5, 10, 20, 50, 100

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
	Reserved	ON							
*	Reserved	OFF							
	Reserved		ON						
*	Reserved		OFF						
	Reserved			ON					
*	Reserved			OFF					
	Reserved				ON				
*	Reserved				OFF				
	Reserved					ON			
*	Reserved	(				OFF			
	Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
*	Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
	Stack Banknote when Power-up							ON	
*	Reject Banknote when Power-up							OFF	
	Reserved								ON
*	Reserved								OFF
	<u> </u>								

This dip switch is located at the side of XBA.

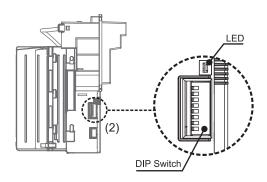


# Appendix

# **XBA-42X (ICT108U)**

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
	Reserved	ON							
*	Reserved	OFF							
	Reserved		ON						
*	Reserved		OFF						
	Reserved			ON					
*	Reserved			OFF					
	Reserved				ON				
*	Reserved				OFF				
	Reserved					ON			
*	Reserved					OFF			
	Reserved						ON		
*	Reserved						OFF		
	Reserved							ON	
*	Reserved							OFF	
	Reserved							•	ON
*	Reserved								OFF

This dip switch is located on the CPU board, remove the CPU board cover first,

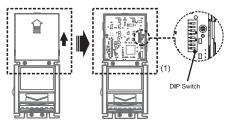

#### ★ Manufacture setting

Note: 1. Calibration card is needed.

### **Currency Assign Data**

Interface Bill value	ICT108U	Interface Bill value	ICT	108U	Interface Bill value	ICT108U	Interface Bill value	ICT108U
BV1	CNY 1	BV7	LAK	500	BV15	THB 20	BV19	USD 1
BV2	CNY 5	BV8	LAK	1000	BV16	THB 50	BV20	USD 5
BV3	CNY 10	BV9	LAK	2000	BV17	THB 100	BV21	USD 10
BV4	CNY 20	BV10	LAK	5000	BV18	THB 500	BV22	USD 20
BV5	CNY 50	BV11	LAK	10000			BV23	USD 50
BV6	CNY 100	BV12	LAK	20000			BV24	USD 100
		BV13	LAK	50000				
		BV14	LAK	100000				