


XBA-HKD4 Option Switch Settings

Supported bill HKD 10, 20, 50, 100 4bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject HKD 10	ON							
★ Accept HKD 10	OFF							
★ Reject HKD 20		ON						
★ Accept HKD 20		OFF						
★ Reject HKD 50			ON					
★ Accept HKD 50			OFF					
★ Reject HKD 100				ON				
★ Accept HKD 100				OFF				
★ Reserved					ON			
★ Reserved					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★ Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
★ Reserved								ON
★ Reserved								OFF

This dip switch is located at the side of XBA.

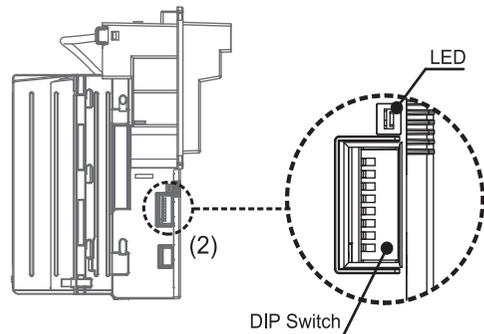


Currency Assign Data

Interface	ICT104U	ICT104V	Pulse	MDB
BV1	HKD 10	HKD 10	HKD 10	HKD 10
BV2	HKD 20	HKD 20	HKD 20	HKD 20
BV3	HKD 50	HKD 50	HKD 50	HKD 50
BV4	HKD 100	HKD 100	HKD 100	HKD 100

XBA-HKD4 (Pulse/MDB/ICT104U/ICT104V)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	
★ Inhibit Active HIGH	ON								
★ Inhibit Active LOW	OFF								
★ Reserved		ON							
★ Reserved		OFF							
★ Reserved			ON						
★ Reserved			OFF						
★ Reserved				ON					
★ Reserved				OFF					
Pulse Mode		MDB Mode		ICT104V Mode					
★ Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2		Connect with coin changer		ON				
★ Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0		Connect with ICT JPSTD converter board		OFF				
★ Pulse Mode						ON			
★ Other Mode						OFF			
Pulse Mode		Other Mode							
★ 1 pulse / HKD 10	MDB Mode						OFF	OFF	
★ 5 pulses / HKD 10	Reserved						OFF	ON	
★ 10 pulses / HKD 10	ICT104U Mode						ON	OFF	
★ 25 pulses / HKD 10	ICT104V Mode						ON	ON	

This dip switch is located on the CPU board, remove the CPU board cover first.

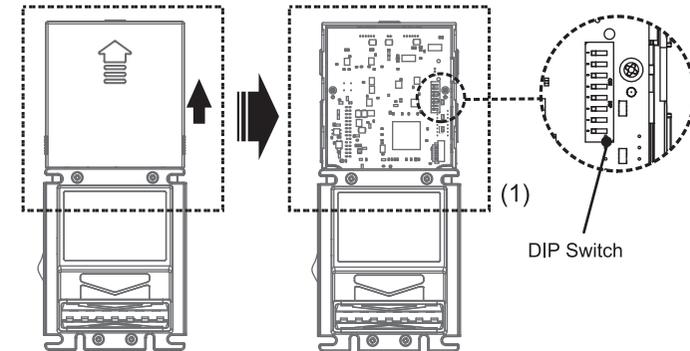

★ Manufacture setting

- Note : 1. Please reset the bill acceptor after set the dip switch.
- 2. Dip switches 1 to 5 are only used for pulse protocol.
- 3. Calibration card is needed.