

L70+/L70F-HNL7

L70+/L70F/P5 DIP SWITCHES SETTING : 1(Pulse/RS232 A0/Parallel A1)

Supported bill HNL 5, 10, 20, 50, 100, 200, 500 7bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW9	SW10
★ 1 Pulse / HNL 5	OFF	OFF	OFF							
2 Pulses / HNL 5	OFF	OFF	ON							
3 Pulses / HNL 5	OFF	ON	OFF							
4 Pulses / HNL 5	OFF	ON	ON							
5 Pulses / HNL 5	ON	OFF	OFF							
10 Pulses / HNL 5	ON	OFF	ON							
20 Pulses / HNL 5	ON	ON	OFF							
100 Pulses / HNL 5	ON	ON	ON							
Fast output Pulse (Lo=50ms/ Hi=100ms)				ON						
★ Slow output (Lo=50ms/ Hi=300ms)				OFF						
Inhibit level Active Low					ON					
★ Inhibit level Active High					OFF					
★ Accept HNL 5 & 10						ON				
Reject HNL 5 & 10						OFF				
★ Accept HNL 20							ON			
Reject HNL 20							OFF			
★ Accept HNL 50								ON		
Reject HNL 50								OFF		
★ Accept HNL 100 & 200									ON	
Reject HNL 100 & 200									OFF	
★ Accept HNL 500										ON
Reject HNL 500										OFF

★ Manufacture setting

- Note: (1) Please reset the bill acceptor after any changes on Dip switch.
 (2) Dip switches 1 to 5 are only used for pulse protocol.
 (3) Parallel A1 Protocol Reject HNL 5.
 (4) RS232 A0 Protocol HNL 5 Code Denomination is 67h.

L70+/L70F-HNL7(Pulse/RS232 A0/Parallel A1)

DIP SWITCHES SETTING : 2(Pulse)

Currency Assign Data

FUNCTION	SW1	SW2	SW3	SW4
★ Credit-Pulse Normal High	ON			
Credit-Pulse Normal Low	OFF			
★ Pulse Mode		ON	OFF	
RS232 A0 Mode		OFF	OFF	
Parallel A1 Mode		OFF	ON	
Reserved		ON	ON	
★ Reserved				ON
				OFF

★ Manufacture setting

Interface Bill value	Pulse	RS232 A0	Parallel A1
BV1	HNL 5	HNL 5	
BV2	HNL 10	HNL 10	HNL 10
BV3	HNL 20	HNL 20	HNL 20
BV4	HNL 50	HNL 50	HNL 50
BV5	HNL 100	HNL 100	HNL 100
BV6	HNL 200	HNL 200	HNL 200
BV7	HNL 500	HNL 500	HNL 500

DIP SWITCHES SETTING : 3(RS232 A0)

FUNCTION	SW1	SW2	SW3	SW4
★ Reserved	ON			
Reserved	OFF			
Pulse Mode		ON	OFF	
★ RS232 A0 Mode		OFF	OFF	
Parallel A1 Mode		OFF	ON	
Reserved		ON	ON	
★ Reserved				ON
				OFF

★ Manufacture setting

RS232 A0 INFORMATION	
BillType Data	
Code	Denomination
1	HNL 10
2	HNL 20
3	HNL 50
4	HNL 100
5	HNL 200
6	HNL 500
7	HNL 5
8	Reserved
9	Reserved

DIP SWITCHES SETTING : 4(Parallel A1)

FUNCTION	SW1	SW2	SW3	SW4
★ Reserved	ON			
Reserved	OFF			
Pulse Mode		ON	OFF	
★ RS232 A0 Mode		OFF	OFF	
Parallel A1 Mode		OFF	ON	
Reserved		ON	ON	
★ Reserved				ON
				OFF

★ Manufacture setting