

## V7-PLN4

### V7 Option Switch Settings : 1(Pulse/MDB/ICT004U)

Supported bill PLN 10, 20, 50, 100 4bills.

V7 dip-switch settings and functions:

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
★	Reject zolty 10	ON											
	Accept zolty 10	OFF											
	Reject zolty 20		ON										
★	Accept zolty 20		OFF										
	Reject zolty 50			ON									
★	Accept zolty 50			OFF									
	Reject zolty 100				ON								
★	Accept zolty 100				OFF								
	Reserved				ON								
★	Reserved				OFF								
	Reserved				ON								
★	Reserved				OFF								
	Harness Disable							ON					
★	Harness Enable							OFF					
	Inhibit Active High								ON				
★	Inhibit Active Low								OFF				
★	1 pulse / zolty 10									OFF	OFF		
	2 pulses / zolty 10									ON	OFF		
	4 pulses / zolty 10									OFF	ON		
	20 pulses / zolty 10									ON	ON		
★	Pulse Speed	50ms LO / 50ms HI								OFF	OFF		
		60ms LO / 300ms HI								ON	OFF		
		30ms LO / 50ms HI								OFF	ON		
		150ms LO / 150ms HI								ON	ON		

★ Manufacture setting

## V7-PLN4 (Pulse/MDB/ICT004U)

### V7 Interface Settings: 3 (Pulse)

	INTERFACE	SW1	SW2	SW3	SW4
★	Credit-Pulse Normal HIGH	ON			
	Credit-Pulse Normal LOW	OFF			
★	Pulse Mode		ON	OFF	
	MDB Mode		OFF	OFF	
	ICT004U Mode		OFF	ON	
	Reserved		ON	ON	
	Reserved				ON
★	Reserved				OFF

★ Manufacture setting

### V7 Interface Settings: 3 (MDB)

	INTERFACE	SW1	SW2	SW3	SW4
★	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2	ON			
	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0	OFF			
	Pulse Mode		ON	OFF	
★	MDB Mode		OFF	OFF	
	ICT004U Mode		OFF	ON	
	Reserved		ON	ON	
	Reserved				ON
★	Reserved				OFF

★ Manufacture setting

### V7 Interface Settings: 3 (ICT004U)

	INTERFACE	SW1	SW2	SW3	SW4
	Reserved	ON			
★	Reserved	OFF			
	Pulse Mode		ON	OFF	
	MDB Mode		OFF	OFF	
★	ICT004U Mode		OFF	ON	
	Reserved		ON	ON	
	Reserved				ON
★	Reserved				OFF

★ Manufacture setting

### Currency Assign Data

Interface Bill value	Pulse	MDB	ICT004U
BV1	Zolty 10	Zolty 10	Zolty 10
BV2	Zolty 20	Zolty 20	Zolty 20
BV3	Zolty 50	Zolty 50	Zolty 50
BV4	Zolty 100	Zolty 100	Zolty 100

Note: (1) Default setting.

(2) Use 2nd and 3rd dip of the internal dip-switch to change different interface protocol.

(3) Remove the front cover and the dip-switch in on the CPU board.

(Please refer to "SW1" setting.)