

V7E+/LX7-SAR5

V7E+/LX7 Option Switch Settings: 1(Pulse/ICT104V/ICT104U/MDB)

Supported bill SAR 1, 5, 10, 50, 100 5bills.

V7E+/LX7 dip-switch settings and functions:

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
★ Reject SAR 1	ON											
★ Accept SAR 1	OFF											
★ Reject SAR 5		ON										
★ Accept SAR 5		OFF										
★ Reject SAR 10			ON									
★ Accept SAR 10			OFF									
★ Reject SAR 50				ON								
★ Accept SAR 50				OFF								
★ Reject SAR 100					ON							
★ Accept SAR 100					OFF							
★ Reserved						ON						
★ Reserved						OFF						
Pulse Mode	Other Mode											
★ Harness Disable	BA stops working when fishing						ON					
★ Harness Enable	Normal						OFF					
★ Inhibit Active High							ON					
★ Inhibit Active Low							OFF					
★ 1 pulse / SAR 1								OFF	OFF			
★ 5 pulses / SAR 1								ON	OFF			
★ 10 pulses / SAR 1								OFF	ON			
★ 20 pulses / SAR 1								ON	ON			
★ Pulse Speed	50ms LO / 50ms HI								OFF	OFF		
	60ms LO / 300ms HI								ON	OFF		
	30ms LO / 50ms HI								OFF	ON		
	150ms LO / 150ms HI								ON	ON		

★ Manufacture setting

V7E+/LX7-SAR5(Pulse/ICT104V/ICT104U/MDB)

DIP SWITCHES SETTING : 2(Pulse)

FUNCTION	SW1	SW2	SW3	SW4
★ Credit-Pulse Normal High	ON			
Credit-Pulse Normal Low	OFF			
★ Pulse Mode		ON	OFF	
ICT104V Interface		OFF	ON	
MDB Interface		ON	ON	
ICT104U Interface		OFF	OFF	
Reserved				ON
★				OFF

★ Manufacture setting

DIP SWITCHES SETTING : 2(ICT104V)

FUNCTION	SW1	SW2	SW3	SW4
★ Reserved	ON			
	OFF			
Pulse Mode		ON	OFF	
★ ICT104V Interface		OFF	ON	
MDB Interface		ON	ON	
ICT104U Interface		OFF	OFF	
Reserved				ON
★				OFF

★ Manufacture setting

DIP SWITCHES SETTING : 2(MDB)

FUNCTION	SW1	SW2	SW3	SW4
★ Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2	ON			
Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0	OFF			
Pulse Mode		ON	OFF	
★ ICT104V Interface		OFF	ON	
MDB Interface		ON	ON	
ICT104U Interface		OFF	OFF	
Reserved				ON
★				OFF

★ Manufacture setting

Note 1. Default setting.

2. Use 2nd and 3rd dip of the internal dip-switch to change different interface protocol.
3. Remove the front cover and the dip-switch in on the CPU board.

Currency Assign Data

Interface Bill value	ICT104U	Pulse	MDB	ICT104V
BV1	SAR 1	SAR 1	SAR 1	SAR 1
BV2	SAR 5	SAR 5	SAR 5	SAR 5
BV3	SAR 10	SAR 10	SAR 10	SAR 10
BV4				
BV5	SAR 50	SAR 50	SAR 50	SAR 50
BV6	SAR 100	SAR 100	SAR 100	SAR 100

DIP SWITCHES SETTING : 2(ICT104U)

FUNCTION	SW1	SW2	SW3	SW4
★ Reserved	ON			
	OFF			
Pulse Mode		ON	OFF	
ICT104V Interface		OFF	ON	
MDB Interface		ON	ON	
★ ICT104U Interface		OFF	OFF	
Reserved				ON
★				OFF

★ Manufacture setting