


XBA-BND5 Option Switch Settings

Supported bill BND 1, 5, 10, 50, 100 5bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
	Reject BND 1	ON							
★	Accept BND 1	OFF							
	Reject BND 5		ON						
★	Accept BND 5		OFF						
	Reject BND 10			ON					
★	Accept BND 10			OFF					
	Reject BND 50				ON				
★	Accept BND 50				OFF				
	Reject BND 100					ON			
★	Accept BND 100					OFF			
	Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★	Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
	Stack Banknote when Power-up							ON	
★	Reject Banknote when Power-up							OFF	
	Reserved								ON
★	Reserved								OFF

This dip switch is located at the side of XBA.

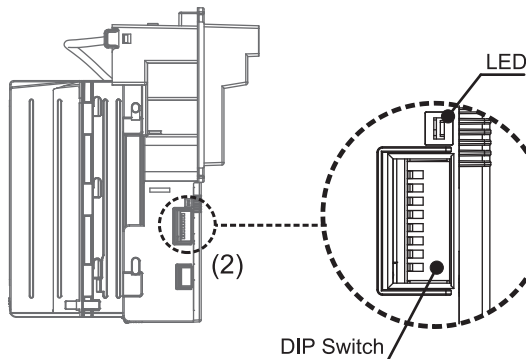

Currency Assign Data

Interface Bill Value	ICT002U	ICT104U	ICT104V	Pulse	MDB
BV1	BND 1	BND 1	BND 1	BND 1	BND 1
BV2	BND 5	BND 5	BND 5	BND 5	BND 5
BV3	BND 10	BND 10	BND 10	BND 10	BND 10
BV4					
BV5	BND 50	BND 50	BND 50	BND 50	BND 50
BV6	BND 100	BND 100	BND 100	BND 100	BND 100

XBA-BND5 (Pulse/MDB/ICT002U/ICT104U/ICT104V)

FUNCTION		SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	
★	Inhibit Active HIGH	ON								
	Inhibit Active LOW	OFF								
	Reserved									ON
	Reserved									OFF
	Reserved				ON					
	Reserved				OFF					
	Reserved									ON
	Reserved									OFF
	Pulse Mode		MDB Mode		ICT104V Mode					
★	Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2		Connect with coin changer		ON				
	Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0		Connect with ICT VCCS converter board		OFF				
★	Pulse Mode						ON			
	Other Mode						OFF			
★	Pulse Mode		Other Mode							
	1 pulse / BND 1		MDB Mode					OFF	OFF	
	5 pulses / BND 1		ICT002U Mode					OFF	ON	
	10 pulses / BND 1		ICT104U Mode					ON	OFF	
	20 pulses / BND 1		ICT104V Mode					ON	ON	

★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note : 1.Calibration card is needed.

This dip switch is located on the CPU board, remove the CPU board cover first.

