


XBA-CHF8(CHF4+EUR4) Option Switch Settings

Supported bill Fr 10, 20, 50, 100 4bills.
 € 5, 10, 20, 50 4bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject Fr 10 & 20	ON							
★ Accept Fr 10 & 20	OFF							
★ Reject Fr 50		ON						
★ Accept Fr 50		OFF						
★ Reject € 5 & 10			ON					
★ Accept € 5 & 10			OFF					
★ Reject € 20 & 50				ON				
★ Accept € 20 & 50				OFF				
★ Reject Fr 100					ON			
★ Accept Fr 100					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★ Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
★ ENABLE IrDA Download / Enable MDB Bill Value Setting								ON
★ Reserved								OFF

This dip switch is located at the side of XBA.

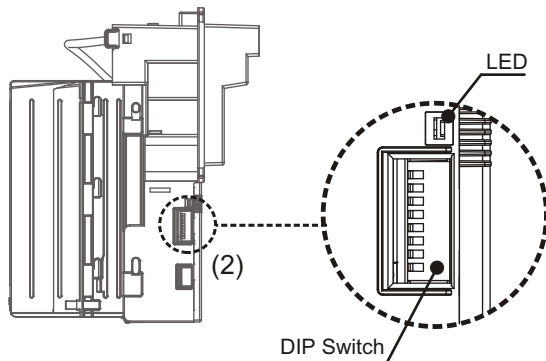


Currency Assign Data

Interface Bill value	ICT104U	Parallel A3	ICT104V	Pulse	MDB
BV1	Fr 10	Fr 10	Fr 10	Fr 10	Fr 10
BV2	Fr 20	Fr 20	Fr 20	Fr 20	Fr 20
BV3	Fr 50	Fr 50	Fr 50	Fr 50	Fr 50
BV4	Fr 100	Fr 100	Fr 100	Fr 100	Fr 100
BV5	€ 5		€ 5	€ 5	€ 5
BV6	€ 10		€ 10	€ 10	€ 10
BV7	€ 20		€ 20	€ 20	€ 20
BV8	€ 50		€ 50	€ 50	€ 50

XBA-CHF8 (Pulse/MDB/ICT104U/ICT104V/Parallel A3)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Inhibit Active HIGH	ON							
Inhibit Active LOW	OFF							
★ ENABLE INHIBIT-Sleep only		ON						
★ 5 second Timeout only		OFF						
★ Normal (Note.2)			OFF	OFF				
★ Mode 1 (Note.3)			OFF	ON				
★ Mode 2 (Note.4)			ON	OFF				
★ Mode 1 + 2 (Note.5)			ON	ON				
Pulse Mode		MDB Mode						
★ Credit-Pulse Normal HIGH		SCALING_FACTOR 100 DECIMAL_PLACE_OFF 2			ON			
★ Credit-Pulse Normal LOW		SCALING_FACTOR 1 DECIMAL_PLACE_OFF 0			OFF			
★ Pulse Mode						ON		
★ Other Mode						OFF		
Pulse Mode		Other Mode						
★ 1 pulse / € 5					MDB Mode		OFF	OFF
★ 5 pulse / € 5					Parallel A3 Mode		OFF	ON
★ 10 pulse / € 5					ICT104U Mode		ON	OFF
★ 25 pulse / € 5					ICT104V Mode		ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

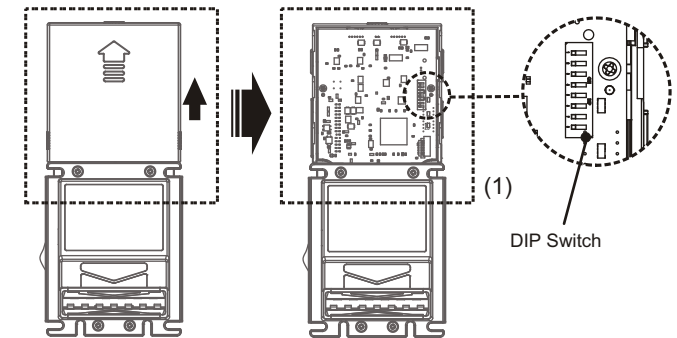

★ Manufacture setting

- Note :
1. After setting dip switch of the credit pulses, you should reset the bill acceptor again.
 2. Normal : No sleep function.
 3. Mode 1 : Bill-acceptor wakes up VMC with banknote only (special cable required).
 4. Mode 2 : VMC wakes up bill-acceptor.
 5. Mode 1+2 : Bill-acceptor wakes up with banknote or by VMC.
 6. Not calibrate card.