


XBA-HEF12(HUF6+EUR6) Option Switch Settings

Supported bill Ft 500, 1000, 2000, 5000, 10000, 20000 6bills.
 € 5, 10, 20, 50, 100, 200 6bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Reject Ft 500 & 1000 & 2000	ON							
	Accept Ft 500 & 1000 & 2000	OFF							
★	Reject Ft 5000 & 10000 & 20000		ON						
★	Accept Ft 5000 & 10000 & 20000		OFF						
	Reject € 5 & 10			ON					
★	Accept € 5 & 10			OFF					
	Reject € 20 & 50				ON				
★	Accept € 20 & 50				OFF				
★	Reject € 100(2019) & 200(2019)					ON			
	Accept € 100(2019) & 200(2019)					OFF			
	Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★	Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
	Stack Banknote when Power-up							ON	
★	Reject Banknote when Power-up							OFF	
	Reserved								ON
★	Reserved								OFF

This dip switch is located at the side of XBA.

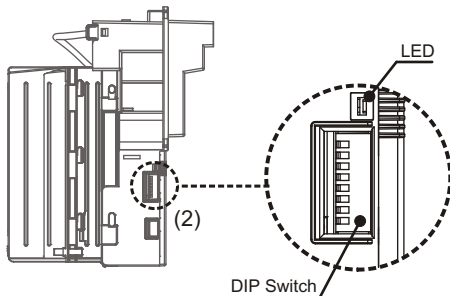

Currency Assign Data


Interface	Pulse	MDB	ICT104V	ICT104U	GPT
BV1	Ft 500	Ft 500	Ft 500	Ft 500	Ft 500
BV2	Ft 1000	Ft 1000	Ft 1000	Ft 1000	Ft 1000
BV3	Ft 2000	Ft 2000	Ft 2000	Ft 2000	Ft 2000
BV4	Ft 5000	Ft 5000	Ft 5000	Ft 5000	Ft 5000
BV5	Ft 10000	Ft 10000	Ft 10000	Ft 10000	
BV6	Ft 20000	Ft 20000	Ft 20000	Ft 20000	
BV7	€ 5	€ 5	€ 5	€ 5	
BV8	€ 10	€ 10	€ 10	€ 10	
BV9	€ 20	€ 20	€ 20	€ 20	
BV10	€ 50	€ 50	€ 50	€ 50	
BV11	€ 100	€ 100	€ 100	€ 100	
BV12	€ 200	€ 200	€ 200	€ 200	

Appendix

XBA-HEF12 (Pulse/MDB/ICT104U/GPT/ICT104V)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	
	Inhibit Active HIGH	ON								
★	Inhibit Active LOW	OFF								
	Reserved		ON							
★	Reserved		OFF							
	Reserved			ON						
★	Reserved			OFF						
	Reserved				ON					
★	Reserved				OFF					
	Pulse Mode	MDB Mode			ICT104V Mode					
★	Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2			Connect with coin changer	ON				
	Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0			Connect with ICT VCCS converter board	OFF				
★	Pulse Mode						ON			
	Other Mode						OFF			
	Pulse Mode	Other Mode								
★	1 pulse / Ft 500	MDB Mode						OFF	OFF	
	5 pulse / Ft 500	GPT Mode						OFF	ON	
	10 pulse / Ft 500	ICT104U Mode						ON	OFF	
	25 pulse / Ft 500	ICT104V Mode						ON	ON	

This dip switch is located on the CPU board, remove the CPU board cover first.

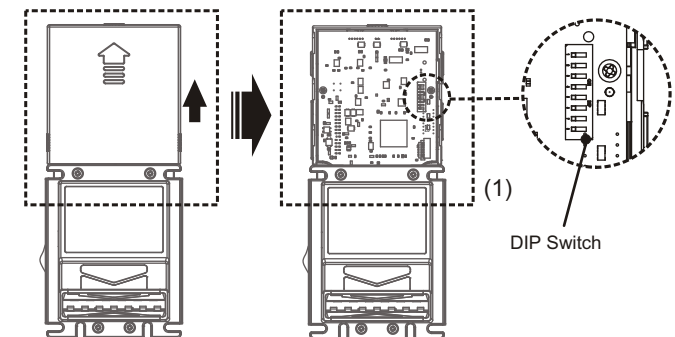

★ Manufacture setting

- Note :
- (1) Please reset the bill acceptor after set the dip switch.
 - (2) Dip switches 1 to 5 are only used for pulse protocol.
 - (3) Not calibrate card.
 - (4) The transaction Record can be saved by USB MSD(only for EX series)
 EUR \$1 display HUF 300 (Only for Pulse, MDB)