


XBA-HRK5 Option Switch Settings

Supported bill HRK 10, 20, 50, 100, 200 5bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Reject HRK 10	ON							
	Accept HRK 10	OFF							
★	Reject HRK 20		ON						
	Accept HRK 20		OFF						
★	Reject HRK 50			ON					
	Accept HRK 50			OFF					
★	Reject HRK 100				ON				
	Accept HRK 100				OFF				
★	Reject HRK 200					ON			
	Accept HRK 200					OFF			
★	Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
	Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★	Stack Banknote when Power-up							ON	
	Reject Banknote when Power-up							OFF	
★	Reserved								ON
	Reserved								OFF

This dip switch is located at the side of XBA.

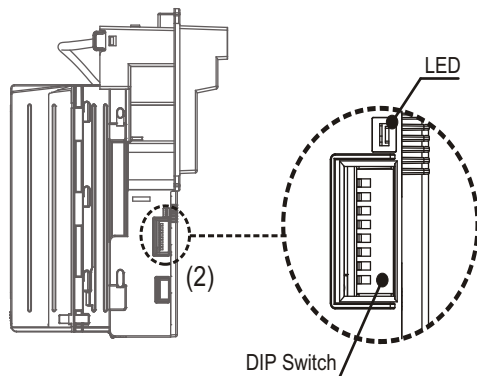


Currency Assign Data

Interface Bill value	ICT104U	GPT	ICT104V	Pulse	MDB
BV1	HRK 10	HRK 10	HRK 10	HRK 10	HRK 10
BV2	HRK 20	HRK 20	HRK 20	HRK 20	HRK 20
BV3	HRK 50	HRK 50	HRK 50	HRK 50	HRK 50
BV4	HRK 100	HRK 100	HRK 100	HRK 100	HRK 100
BV5	HRK 200		HRK 200	HRK 200	HRK 200

XBA-HRK5 (Pulse/MDB/GPT/ICT104U/ICT104V)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8				
★	Inhibit Active HIGH	ON											
	Inhibit Active LOW	OFF											
	ENABLE INHIBIT-Sleep Only									ON			
	5 second Timeout Only									OFF			
★	NORMAL			OFF	OFF								
	MODE1			OFF	ON								
	MODE2			ON	OFF								
	MODE1+2			ON	ON								
	Pulse Mode	MDB Mode			ICT104V Mode								
★	Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2			Connect with coin changer					ON			
	Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0			Connect with ICT VCCS converter board					OFF			
★	Pulse Mode									ON			
	Other Mode						OFF						
	Pulse Mode	Other Mode											
★	1 pulse / HRK 10	MDB Mode						OFF	OFF				
	5 pulse / HRK 10	GPT Mode						OFF	ON				
	10 pulse / HRK 10	ICT104U Mode						ON	OFF				
	20 pulse / HRK 10	ICT104V Mode						ON	ON				

This dip switch is located on the CPU board, remove the CPU board cover first.

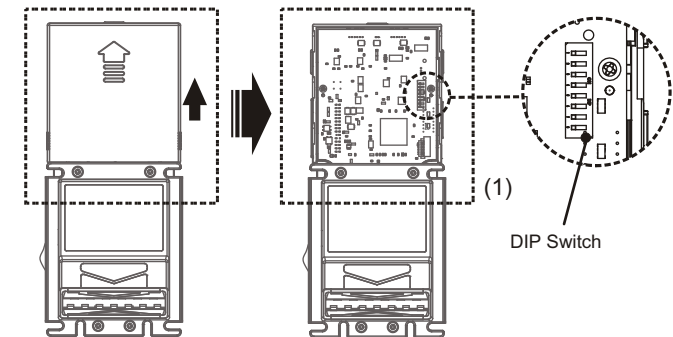

★ Manufacture setting

Note : 1.Please reset the bill acceptor after set the dip switch.

2.Dip switches 1 to 5 are only used for pulse protocol.

3.Calibrate card.

4.NORMAL: No sleep function

MODE 1: Bill-acceptor wakes up VMC with banknote only (special cable required)

MODE 2: VMC wakes up bill-acceptor

MODE 1+2: Bill-acceptor wakes up with banknote or by VMC