


XBA-MDL9

XBA Option Switch Settings(Pulse/MDB/ICT104U/GPT/ICT104V)

Supported bill MDL 1, 5, 10, 20, 50, 100, 200, 500, 1000 4bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Reject MDL 1 (Note.4)	ON							
	Accept MDL 1 (Note.3)	OFF							
★	Reject MDL 5 & 10 & 20		ON						
★	Accept MDL 5 & 10 & 20		OFF						
★	Reject MDL 50 & 100 & 200			ON					
★	Accept MDL 50 & 100 & 200			OFF					
★	Reject MDL 500				ON				
★	Accept MDL 500				OFF				
★	Reject MDL 1000				ON				
★	Accept MDL 1000				OFF				
★	Disable Bill Reject 4 Times BA Stop By 30 Sec					ON			
★	Enable Bill Reject 4 Times BA Stop By 30 Sec					OFF			
★	Stack Banknote when Power-up						ON		
★	Reject Banknote when Power-up						OFF		
★	ENABLE IrDA Download							ON	
★	Reserved							OFF	

This dip switch is located at the side of XBA.

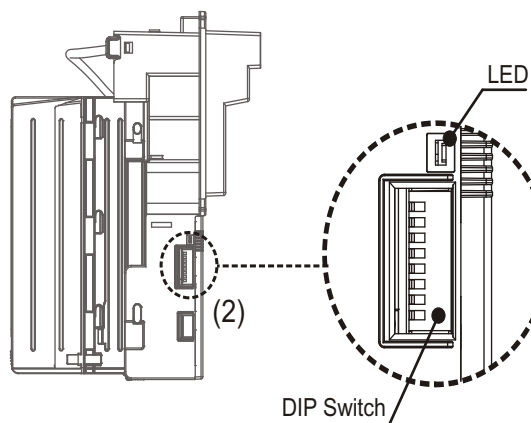

Currency Assign Data


Dip 1 is OFF					
Interface	Pulse	MDB	ICT104U	ICT104V	GPT
Bill value					
BV1	MDL 1	MDL 1	MDL 1	MDL 1	MDL 1
BV2	MDL 5	MDL 5	MDL 5	MDL 5	MDL 5
BV3	MDL 10	MDL 10	MDL 10	MDL 10	MDL 10
BV4	MDL 20	MDL 20	MDL 20	MDL 20	MDL 20
BV5	MDL 50	MDL 50	MDL 50	MDL 50	
BV6	MDL 100	MDL 100	MDL 100	MDL 100	
BV7	MDL 200	MDL 200	MDL 200	MDL 200	
BV8	MDL 500		MDL 500	MDL 500	
BV9	MDL 1000		MDL 1000	MDL 1000	
Dip 1 is ON					
Interface	Pulse	MDB	ICT104U	ICT104V	GPT
Bill value					
BV1	MDL 5	MDL 5			
BV2	MDL 10	MDL 10	MDL 5	MDL 5	MDL 5
BV3	MDL 20	MDL 20	MDL 10	MDL 10	MDL 10
BV4	MDL 50	MDL 50	MDL 20	MDL 20	MDL 20
BV5	MDL 100	MDL 100	MDL 50	MDL 50	
BV6	MDL 200	MDL 200	MDL 100	MDL 100	
BV7	MDL 500	MDL 500	MDL 200	MDL 200	
BV8	MDL 1000	MDL 1000	MDL 500	MDL 500	
BV9			MDL 1000	MDL 1000	

Appendix

XBA-MDL9 (Pulse/MDB/ICT104U/GPT/ICT104V)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8		
	Inhibit Active HIGH	ON									
★	Inhibit Active LOW	OFF									
	Reserved									ON	
★	Reserved		OFF								
	Reserved			ON							
★	Reserved			OFF							
	Reserved				ON						
★	Reserved				OFF						
	Pulse Mode	MDB Mode			ICT104V Mode						
★	Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2			Connect with coin changer		ON				
	Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0			Connect with ICT VCCS converter board		OFF				
★	Pulse Mode						ON				
	Other Mode						OFF				
	Pulse Mode				Other Mode						
★	1 pulse / MDL 1(Note.3)/MDL 5(Note.4)				MDB Mode					OFF	OFF
	2 pulse / MDL 1(Note.3)/MDL 5(Note.4)				GPT Mode					OFF	ON
	5 pulse / MDL 1(Note.3)/MDL 5(Note.4)				ICT104U Mode					ON	OFF
	10 pulse / MDL 1(Note.3)/MDL 5(Note.4)				ICT104V Mode					ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

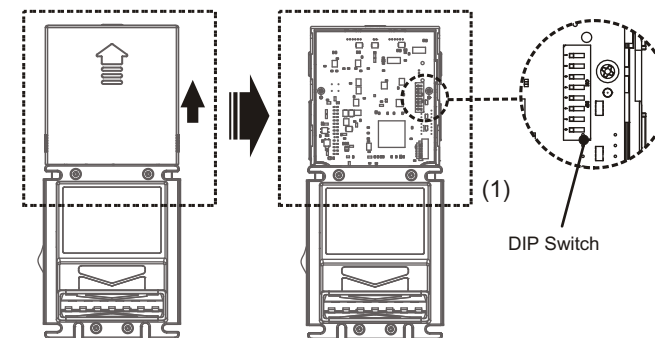

★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note : 1.Calibrate card.

2.No sleep function.

3.Dip 1 turn OFF (MDB Protocol:Reject MDL 500 & 1000).

4.Dip 1 turn ON (MDB Protocol:Accept MDL 500 & 1000).