


XBA-ARS8 Option Switch Settings

Supported bill ARS 20, 50, 100, 200, 500, 1000, 2000, 10000 8bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Reject ARS 20 (NOTE.2)	ON							
★	Accept ARS 20 (NOTE.2)	OFF							
★	Reject ARS 50 & 100								
★	Accept ARS 50 & 100								
★	Reject ARS 200 & 500		ON						
★	Accept ARS 200 & 500		OFF						
★	Reject ARS 1000 & 2000			ON					
★	Accept ARS 1000 & 2000			OFF					
★	Reject ARS 10000				ON				
★	Accept ARS 10000				OFF				
★	Disable Bill Reject 4 Times BA Stop By 30 Sec					ON			
★	Enable Bill Reject 4 Times BA Stop By 30 Sec					OFF			
★	Stack Banknote when Power-up						ON		
★	Reject Banknote when Power-up						OFF		
★	Reserved							ON	
★	Reserved							OFF	

This dip switch is located at the side of XBA.

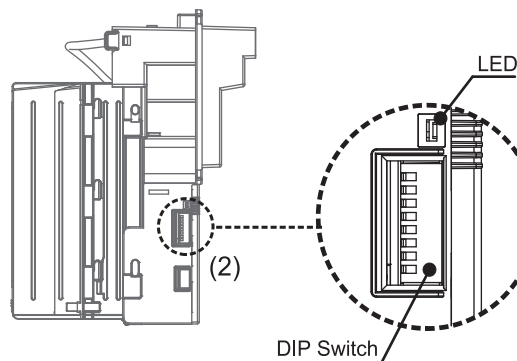

Currency Assign Data

Interface Bill value	ICT104U		ICT104V		Pulse		MDB	
							When Dip 1 is ON	When Dip 1 is OFF
BV1	ARS	20	ARS	20	ARS	20	ARS	20
BV2	ARS	50	ARS	50	ARS	50	ARS	50
BV3	ARS	100	ARS	100	ARS	100	ARS	100
BV4	ARS	200	ARS	200	ARS	200	ARS	200
BV5	ARS	500	ARS	500	ARS	500	ARS	500
BV6	ARS	1000	ARS	1000	ARS	1000	ARS	1000
BV7	ARS	2000	ARS	2000	ARS	2000	ARS	2000
BV8	ARS	10000	ARS	10000	ARS	10000	ARS	10000

XBA-ARS8 (Pulse/MDB/ICT104U/ICT104V)

FUNCTION		SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Inhibit Active HIGH	ON							
	Inhibit Active LOW	OFF							
★	Reserved		ON						
	Reserved		OFF						
★	Reserved			ON					
	Reserved			OFF					
★	Reserved				ON				
	Reserved				OFF				
Pulse Mode		MDB Mode			ICT104V Mode				
★	Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2			Connect with coin changer		ON		
	Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0			Connect with ICT JPSTD converter board		OFF		
★	Pulse Mode						ON		
	Other Mode						OFF		
Pulse Mode		Other Mode							
★	1 pulse / ARS 10 & ARS 50	MDB Mode							
	2 pulses / ARS 10 & ARS 50	Reserved							
	5 pulses / ARS 10 & ARS 50	ICT104U Mode							
	20 pulses / ARS 10 & ARS 50	ICT104V Mode							

★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note : 1.Calibration card is needed.

2.Pulse Mode:

When Dip 1 is OFF,One Pulse per ARS 10.

When Dip 1 is ON ,One Pulse per ARS 50.

MDB Mode :

Dip 1 turn OFF (MDB Mode : Reject ARS 10000)

Dip 1 turn ON (MDB Mode : Reject ARS 20)

This dip switch is located on the CPU board, remove the CPU board cover first.

