

XBA-EUR9(EUR4+USD5) Option Switch Settings 1:

Supported bill EUR 5, 10, 20, 50


USD 1, 5, 10, 20, 50 9 bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject Euro 5 & 10	ON							
★ Accept Euro 5 & 10	OFF							
★ Reject Euro 20 & 50		ON						
★ Accept Euro 20 & 50		OFF						
★ Reject USD 1 & 5			ON					
★ Accept USD 1 & 5			OFF					
★ Reject USD 10 & 20				ON				
★ Accept USD 10 & 20				OFF				
★ Reject USD 50					ON			
★ Accept USD 50					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★ Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
★ Reserved								ON
★ Reserved								OFF

Currency Assign Data

Bill value	Interface	MDB
BV1	Euro	5
BV2	Euro	10
BV3	Euro	20
BV4	Euro	50
BV5	USD	1
BV6	USD	5
BV7	USD	10
BV8	USD	20
BV9	USD	50

This dip switch is located at the side of XBA.

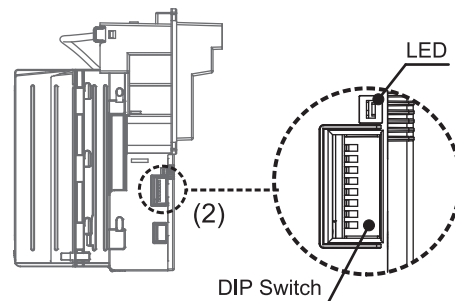

XBA-EUR9(EUR4+USD5) Switch Settings 2: (MDB)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Inhibit Active HIGH	ON							
★ Inhibit Active LOW	OFF							
★ Reserved		ON						
★ Reserved		OFF						
★ Reserved			ON					
★ Reserved			OFF					
★ Reserved				ON				
★ Reserved				OFF				
★ Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2					ON			
★ Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0					OFF			
★ Reserved						ON		
★ Reserved						OFF		
★ Reserved							ON	
★ Reserved							OFF	
★ Reserved								ON
★ Reserved								OFF

★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note: 1. Calibrate card is needed.

This dip switch is located on the CPU board, remove the CPU board cover first.

