
## **XBA-RSD8 Option Switch Settings**

Supported bill RSD 10, 20, 50, 100, 200, 500, 1000, 2000 8bills.

|   | FUNCTION   | SW1 | SW2 | SW3 | SW4 | SW5 | SW6 | SW7 | SW8 |
|---|--|-----|-----|-----|-----|-----|-----|-----|-----|
|   | Reject RSD 10 & 20                               | ON  |     |     |     |     |     |     |     |
| * | Accept RSD 10 & 20                               | OFF |     |     |     |     |     |     |     |
|   | Reject RSD 50 & 100                              |     | ON  |     |     |     |     |     |     |
| * | Accept RSD 50 & 100                              |     | OFF |     |     |     |     |     |     |
|   | Reject RSD 200 & 500                             |     | •   | ON  |     |     |     |     |     |
| * | Accept RSD 200 & 500                             |     |     | OFF |     |     |     |     |     |
|   | Reject RSD 1000                                  |     |     | •   | ON  |     |     |     |     |
| * | Accept RSD 1000                                  |     |     |     | OFF |     |     |     |     |
|   | Reject RSD 2000                                  |     |     |     |     | ON  |     |     |     |
| * | Accept RSD 2000                                  |     |     |     |     | OFF |     |     |     |
|   | Disable Bill Reject 4 Times<br>BA Stop By 30 Sec |     | ON  |     |     |     |     |     |     |
| * | Enable Bill Reject 4 Times<br>BA Stop By 30 Sec  |     |     |     |     |     | OFF |     |     |
|   | Stack Banknote when Power-up                     |     |     |     |     |     |     | ON  |     |
| * | Reject Banknote when Power-up                    | OFF |     |     |     |     |     |     |     |
|   | Reserved   |     |     |     |     |     |     |     |     |
| * | Reserved   |     |     |     |     |     |     | OFF |     |

This dip switch is located at the side of XBA.

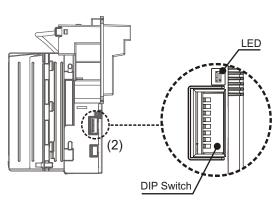

## **Currency Assign Data**


| Interface<br>Bill value | ICT104U | GPT | ICT104V | Pulse | MDB  |
|-------------------------|---------|-----|---------|-------|------|
| BV1                     | 10      | 10  | 10      | 10    | 10   |
| BV2                     | 20      | 20  | 20      | 20    | 20   |
| BV3                     | 50      | 50  | 50      | 50    | 50   |
| BV4                     | 100     | 100 | 100     | 100   | 100  |
| BV5                     | 200     |     | 200     | 200   | 200  |
| BV6                     | 500     |     | 500     | 500   | 500  |
| BV7                     | 1000    |     | 1000    | 1000  | 1000 |
| BV8                     | 2000    |     | 2000    | 2000  | 2000 |

\_Appendix

## XBA-RSD8 (Pulse/MDB/GPT/ICT104U/ICT104V)

|   | FUNCTION                 | SW1  | SW2 | SW3 | SW4          | SW5                                   |     | SW6 | SW7 | SW8 |
|---|--------------------------|--|-----|-----|--------------|---------------------------------------|-----|-----|-----|-----|
|   | Inhibit Active HIGH      | ON   |     |     |              |                                       |     |     |     |     |
| * | Inhibit Active LOW       | OFF  |     |     |              |                                       |     |     |     |     |
|   | Reserved                 |  | ON  |     |              |                                       |     |     |     |     |
| * | Reserved                 |  | OFF |     |              |                                       |     |     |     |     |
|   | Reserved                 |  |     | ON  |              |                                       |     |     |     |     |
| * | Reserved                 |  |     | OFF |              |                                       |     |     |     |     |
|   | Reserved                 |  |     |     | ON           |                                       |     |     |     |     |
| * | Reserved                 |  |     |     | OFF          |                                       | _   |     |     |     |
|   | Pulse Mode               | MDB Mode   |     |     | ICT104V Mode |                                       |     |     |     |     |
| * | Credit-Pulse Normal HIGH | Scaling Factor (SF) = 10 Decimal Point Position (DP Scaling Factor (SF) = Decimal Point Position (DP |     |     | PP) = 2      | Connect with coin changer             | ON  |     |     |     |
|   | Credit-Pulse Normal LOW  |  |     |     |              | Connect with ICT VCCS converter board | OFF |     |     |     |
| * | Pulse Mode               |  |     |     |              |                                       |     | ON  |     |     |
|   | Other Mode               | OFF  |     |     |              |                                       |     |     |     |     |
|   | Pulse Mode               | Other Mode   |     |     |              |                                       |     |     |     |     |
| * | 1 pulse / RSD 10         | MDB Mode   |     |     |              |                                       |     | OFF | OFF |     |
|   | 5 pulse / RSD 10         | GPT Mode   |     |     |              |                                       |     | OFF | ON  |     |
|   | 10 pulse / RSD 10        | ICT104U Mode   |     |     |              |                                       |     | ON  | OFF |     |
|   | 20 pulse / RSD 10        | ICT104V Mode   |     |     |              |                                       |     |     | ON  | ON  |

This dip switch is located on the CPU board, remove the CPU board cover first.

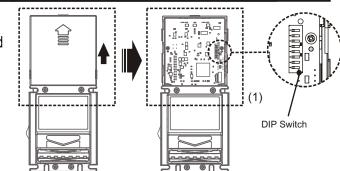

## ★ Manufacture setting

Note: 1.Affer setting dip switch of the credit pulses, you should reset the bill acceptor again. 2.Calibrate card.

© 2014 International Currency Technologies Corporation Vol. 3.0 Part Number : SWS6RS830-R