# XBA-GEL6

XBA Option Switch Settings(Pulse/MDB/ICT104U/ICT104V)

Supported bill Lari 5, 10, 20, 50, 100, 200   6bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
Reject Lari 5 & 10	ON							
★ Accept Lari 5 & 10	OFF							
Reject Lari 20		ON						
★ Accept Lari 20		OFF						
Reject Lari 50			ON					
★ Accept Lari 50			OFF					
Reject Lari 100				ON				
★ Accept Lari 100				OFF				
Reject Lari 200					ON			
★ Accept Lari 200					OFF			
Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
Reserved								ON
★ Reserved								OFF

This dip switch is located at the side of XBA.

LED

(2)

DIP Switch
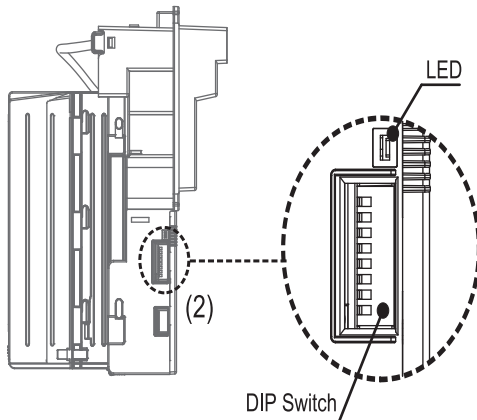
Currency Assign Data

Interface / Bill value	Pulse	MDB	ICT104V	ICT104U
BV1	Lari 5	Lari 5	Lari 5	Lari 5
BV2	Lari 10	Lari 10	Lari 10	Lari 10
BV3	Lari 20	Lari 20	Lari 20	Lari 20
BV4	Lari 50	Lari 50	Lari 50	Lari 50
BV5	Lari 100	Lari 100	Lari 100	Lari 100
BV6	Lari 200	Lari 200	Lari 200	Lari 200

Appendix

XBA-GEL6 (Pulse/MDB/ICT104U/ICT104V)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
Inhibit Active HIGH	ON							
★ Inhibit Active LOW	OFF							
Reserved		ON						
★ Reserved		OFF						
Reserved			ON					
★ Reserved			OFF					
Reserved				ON				
★ Reserved				OFF				

	Pulse Mode	MDB Mode	ICT104V Mode	Other Mode	SW6
★ Credit-Pulse Normal HIGH		Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2	Connect with coin changer	Reserved	ON
Credit-Pulse Normal LOW		Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0	Connect with ICT VCCS converter board	Reserved	OFF

	SW7
★ Pulse Mode	ON
Other Mode	OFF

	Pulse Mode	Other Mode	SW7	SW8
★	1 pulse / Lari 5	MDB Mode	OFF	OFF
	2 pulses / Lari 5	Reserved	OFF	ON
	5 pulses / Lari 5	ICT104U Mode	ON	OFF
	20 pulses / Lari 5	ICT104V Mode	ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

(1)
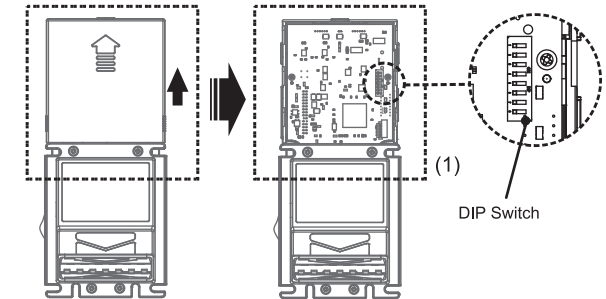
DIP Switch

★ Manufacture setting

After setting dip switch of the credit pulses,you should reset the bill acceptor again.

Note:(1) Please reset the bill acceptor after set the dip switch.
(2) Dip switches 1 to 5 are only used for pulse protocol.
(3) No sleep function.
(4) Calibration card is needed.