


XBA-KWD4 Option Switch Settings

Supported bill KWD 0.25, 0.5, 1, 5 4bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject KWD 0.25	ON							
★ Accept KWD 0.25	OFF							
★ Reject KWD 0.5		ON						
★ Accept KWD 0.5		OFF						
★ Reject KWD 1			ON					
★ Accept KWD 1			OFF					
★ Reject KWD 5				ON				
★ Accept KWD 5				OFF				
★ Reserved					ON			
★ Reserved					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★ Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
★ Reserved								ON
★ Reserved								OFF

This dip switch is located at the side of XBA.

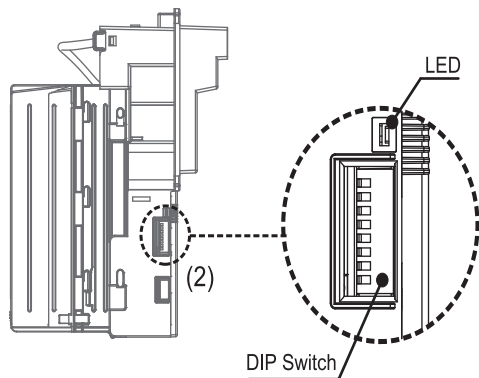


Currency Assign Data

Interface	ICT104U	ICT104V	Pulse	MDB
Bill value				
BV1	KWD 0.25	KWD 0.25	KWD 0.25	KWD 0.25
BV2	KWD 0.5	KWD 0.5	KWD 0.5	KWD 0.5
BV3	KWD 1	KWD 1	KWD 1	KWD 1
BV4	KWD 5	KWD 5	KWD 5	KWD 5

XBA-KWD4 (Pulse/MDB/ICT104U/ICT104V)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Inhibit Active HIGH	ON							
★ Inhibit Active LOW	OFF							
★ Reserved		ON						
★ Reserved		OFF						
★ Reserved			ON					
★ Reserved			OFF					
★ Reserved				ON				
★ Reserved				OFF				
	Pulse Mode		MDB Mode		ICT104V Mode			
★ Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2		Connect with coin changer		ON			
★ Credit-Pulse Normal LOW	Scaling Factor (SF) = 1000 Decimal Point Position (DPP) = 3		Connect with ICT VCCS converter board		OFF			
★ Pulse Mode						ON		
★ Other Mode						OFF		
	Pulse Mode		Other Mode					
★ 1 pulse / KWD 0.25			MDB Mode				OFF	OFF
★ 2 pulses / KWD 0.25			Reserved				OFF	ON
★ 4 pulses / KWD 0.25			ICT104U Mode				ON	OFF
★ 20 pulses / KWD 0.25			ICT104V Mode				ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

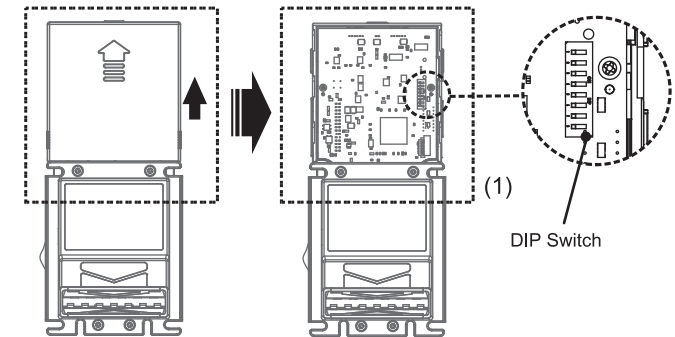

★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note : 1. Please reset the bill acceptor after set the dip switch.

2. Dip switches 1 to 5 are only used for pulse protocol.

3. Calibration card is needed.