


# XBA-UAH5 Option Switch Settings

Supported bill UAH 1, 2, 5, 10, 20 5bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Reject H 1	ON							
★	Accept H 1	OFF							
★	Reject H 2		ON						
★	Accept H 2		OFF						
★	Reject H 5			ON					
★	Accept H 5			OFF					
★	Reject H 10				ON				
★	Accept H 10				OFF				
★	Reject H 20					ON			
★	Accept H 20					OFF			
★	Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★	Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★	Stack Banknote when Power-up							ON	
★	Reject Banknote when Power-up							OFF	
	Reserved								ON
★	Reserved								OFF

This dip switch is located at the side of XBA.

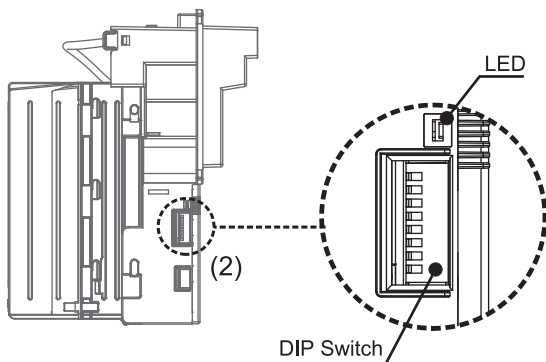


## Currency Assign Data

Interface	ICT104U	Parallel A3	ICT104V	Pulse		MDB	
				When Dip 1 is ON	When Dip 1 is OFF	When Dip 1 is ON	When Dip 1 is OFF
BV1	1	1	1		1		1
BV2	2	2	2	2	2	2	2
BV3	5	5	5	5	5	5	5
BV4	10	10	10	10	10	10	10
BV5	20		20	20	20	20	20

# XBA-UAH5 (Pulse/MDB/ICT104U/Parallel A3/ICT104V)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Inhibit Active HIGH	ON							
	Inhibit Active LOW	OFF							
★	Reserved		ON						
	Reserved		OFF						
★	Reserved			ON					
	Reserved			OFF					
★	Reserved				ON				
	Reserved				OFF				
★	Pulse Mode	MDB Mode			ICT104V Mode				
	Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2			Connect with coin changer	ON			
★	Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0			Connect with ICT VCCS converter board	OFF			
	Pulse Mode								
★	Other Mode						OFF		
	Pulse Mode	Other Mode							
★	1 pulse / H 1	MDB Mode						OFF	OFF
	5 pulses / H 1	Parallel A3 Mode						OFF	ON
★	10 pulses / H 1	ICT104U Mode						ON	OFF
	25 pulses / H 1	ICT104V Mode						ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

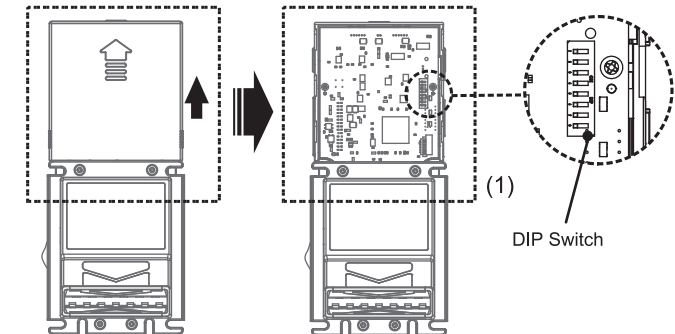

## ★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note : 1.Please reset the bill acceptor after set the dip switch.

2.Dip switches 1 to 5 are only used for pulse protocol.

3.Calibration card is needed.