


# XBA-UAH7 Option Switch Settings

Supported bill UAH 5, 10, 20, 50, 100, 200, 500 7bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject H 5	ON							
★ Accept H 5	OFF							
★ Reject H 10		ON						
★ Accept H 10		OFF						
★ Reject H 20 & 50			ON					
★ Accept H 20 & 50			OFF					
★ Reject H 100 & 200				ON				
★ Accept H 100 & 200				OFF				
★ Reject H 500					ON			
★ Accept H 500					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★ Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
★ Reserved								ON
★ Reserved								OFF

This dip switch is located at the side of XBA.

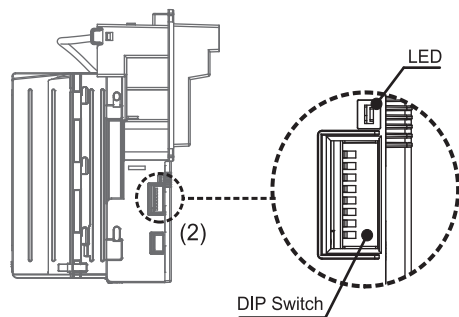

## Currency Assign Data

Interface	ICT104U	ICT104V	Pulse	MDB
Bill value				
BV1	H 5	H 5	H 5	H 5
BV2	H 10	H 10	H 10	H 10
BV3	H 20	H 20	H 20	H 20
BV4	H 50	H 50	H 50	H 50
BV5	H 100	H 100	H 100	H 100
BV6	H 200	H 200	H 200	H 200
BV7	H 500	H 500	H 500	H 500

# XBA-UAH7 (Pulse/MDB/ICT104U/ICT104V)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Inhibit Active HIGH	ON							
Inhibit Active LOW	OFF							
★ Reserved		ON						
★ Reserved		OFF						
★ Reserved			ON					
★ Reserved			OFF					
★ Reserved				ON				
★ Reserved				OFF				
	<b>Pulse Mode</b>		<b>MDB Mode</b>		<b>ICT104V Mode</b>			
★ Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2		Connect with coin changer		ON			
★ Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0		Connect with ICT VCCS converter board		OFF			
★ Pulse Mode						ON		
Other Mode						OFF		
	<b>Pulse Mode</b>		<b>Other Mode</b>					
★ 1 pulse / H 5			MDB Mode				OFF	OFF
5 pulses / H 5			Reserved				OFF	ON
10 pulses / H 5			ICT104U Mode				ON	OFF
25 pulses / H 5			ICT104V Mode				ON	ON

### ★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

- Note :
1. Please reset the bill acceptor after set the dip switch.
  2. Dip switches 1 to 5 are only used for pulse protocol.
  3. Calibration card is needed.

This dip switch is located on the CPU board, remove the CPU board cover first.

