


# XBA-AUD5 Option Switch Settings

Supported bill AUD 5, 10, 20, 50, 100 5bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject AUD 5	ON							
★ Accept AUD 5	OFF							
★ Reject AUD 10		ON						
★ Accept AUD 10		OFF						
★ Reject AUD 20			ON					
★ Accept AUD 20			OFF					
★ Reject AUD 50				ON				
★ Accept AUD 50				OFF				
★ Reject AUD 100					ON			
★ Accept AUD 100					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★ Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
★ Reserved								ON
★ Reserved								OFF

This dip switch is located at the side of XBA.

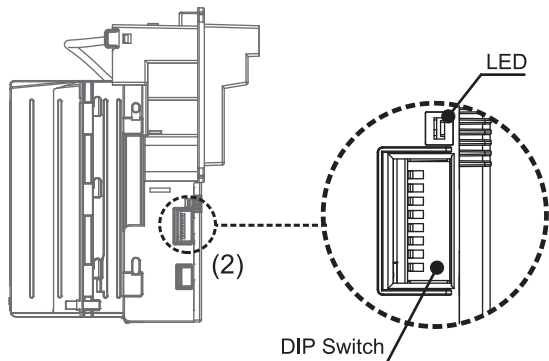

## Currency Assign Data


Interface	ICT002U	ICT104U	ICT104V	Pulse	MDB
BV1	AUD 5	AUD 5	AUD 5	AUD 5	AUD 5
BV2	AUD 10	AUD 10	AUD 10	AUD 10	AUD 10
BV3	AUD 20	AUD 20	AUD 20	AUD 20	AUD 20
BV4	AUD 50	AUD 50	AUD 50	AUD 50	AUD 50
BV5	AUD 100	AUD 100	AUD 100	AUD 100	AUD 100

# XBA-AUD5 (Pulse/MDB/ICT002U/ICT104U/ICT104V)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	
★ Inhibit Active HIGH	ON								
★ Inhibit Active LOW	OFF								
★ Reserved		ON							
★ Reserved		OFF							
★ Reserved			ON						
★ Reserved			OFF						
★ Reserved				ON					
★ Reserved				OFF					
<b>Pulse Mode</b>		<b>MDB Mode</b>		<b>ICT104V Mode</b>					
★ Credit-Pulse Normal HIGH	SCALING_FACTOR (SF) DECIMAL_POINT POSITION (DPP) 100 2		Connect with coin change		ON				
★ Credit-Pulse Normal LOW	SCALING_FACTOR (SF) DECIMAL_POINT POSITION (DPP) 1 0		Connect with ICT VCCS Converter board		OFF				
★ Pulse Mode						ON			
★ Other Mode						OFF			
<b>Pulse Mode</b>		<b>Other Mode</b>							
★ 1 pulse / AUD 5	MDB Mode						OFF	OFF	
★ 5 pulses / AUD 5	ICT002U Mode						OFF	ON	
★ 10 pulses / AUD 5	ICT104U Mode						ON	OFF	
★ 20 pulses / AUD 5	ICT104V Mode						ON	ON	

★ Manufacture setting

This dip switch is located on the CPU board, remove the CPU board cover first.

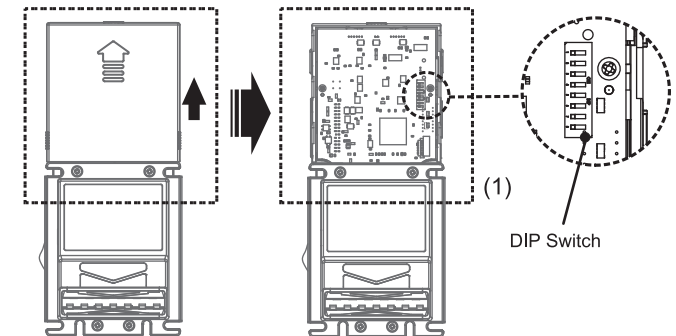

★ Manufacture setting

Note : 1. After setting dip switch of the credit pulses, you should reset the bill acceptor again.  
2. Calibration card is needed.