
## **XBA-JPY4 Option Switch Settings**

## Supported bill ¥ 1000, 2000, 5000, 10000 4bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
	Reject ¥ 1000	ON							
*	Accept ¥ 1000	OFF							
	Reject ¥ 2000		ON						
*	Accept ¥ 2000		OFF						
	Reject ¥ 5000			ON					
*	Accept ¥ 5000			OFF					
	Reject ¥ 10000				ON				
*	Accept ¥ 10000				OFF				
	Reserved					ON			
*	Reserved					OFF			
	Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
*	Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
	Stack Banknote when Power-up							ON	
*	Reject Banknote when Power-up							OFF	
	Reserved								ON
*	Reserved								OFF

This dip switch is located at the side of XBA.

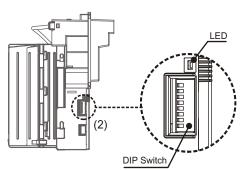


# **Currency Assign Data**

Interface Bill value	ICT002U	ICT104U	ICT104V	Pulse	MDB	
BV1	¥ 1000	¥ 1000	¥ 1000	¥ 1000	¥ 1000	
BV2	¥ 2000	¥ 2000	¥ 2000	¥ 2000	¥ 2000	
BV3	¥ 5000	¥ 5000	¥ 5000	¥ 5000	¥ 5000	
BV4	¥ 10000	¥ 10000	¥ 10000	¥ 10000	¥ 10000	

### XBA-JPY4 (Pulse/MDB/ICT)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
	Inhibit Active HIGH	ON							
*	Inhibit Active LOW	OFF							
	Reserved		ON						
*	Reserved		OFF						
	Reserved			ON					
*	Reserved	OFF							
	Reserved	ON							
*	Reserved				OFF				
	Pulse Mode	ICT104V Mode							
*	Credit-Pulse Normal HIGH	Connect with coin changer			ON				
	Credit-Pulse Normal LOW	Connect with ICT VCCS converter board			OFF				
*	Pulse Mode					ON			
	Other Mode					OFF			
*	1 pulse / ¥ 1000	MDB Mode						OFF	OFF
	5 pulse / ¥ 1000	ICT002U Mode				le		OFF	ON
	10 pulse / ¥ 1000	ICT104U Mode					ON	OFF	
	25 pulse / ¥ 1000	ICT104V Mode					ON	ON	

This dip switch is located on the CPU board, remove the CPU board cover first.

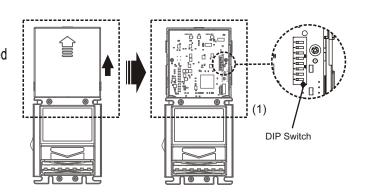

#### ★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note: 1. Calibration card is not needed.

2. Scaling Factor (SF) = 1,Decimal Point Position (DPP) = 0