


XBA-UAH5 Option Switch Settings

Supported bill UAH 1, 2, 5, 10, 20 5bills.

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Reject H 1	ON							
★ Accept H 1	OFF							
★ Reject H 2		ON						
★ Accept H 2		OFF						
★ Reject H 5			ON					
★ Accept H 5			OFF					
★ Reject H 10				ON				
★ Accept H 10				OFF				
★ Reject H 20					ON			
★ Accept H 20					OFF			
★ Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★ Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
★ Stack Banknote when Power-up							ON	
★ Reject Banknote when Power-up							OFF	
★ Reserved								ON
★ Reserved								OFF

This dip switch is located at the side of XBA.

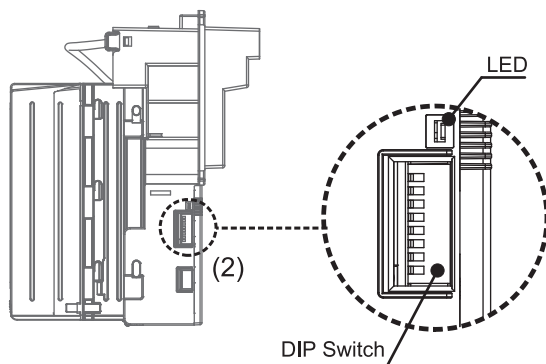


Currency Assign Data

Interface	ICT104U	ICT104V	Pulse	MDB
BV1	H 1	H 1	H 1	H 1
BV2	H 2	H 2	H 2	H 2
BV3	H 5	H 5	H 5	H 5
BV4	H 10	H 10	H 10	H 10
BV5	H 20	H 20	H 20	H 20

XBA-UAH5 (Pulse/MDB/ICT104U/ICT104V)

FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★ Inhibit Active HIGH	ON							
Inhibit Active LOW	OFF							
★ Reserved		ON						
★ Reserved		OFF						
★ Reserved			ON					
★ Reserved			OFF					
★ Reserved				ON				
★ Reserved				OFF				
	Pulse Mode		MDB Mode		ICT104V Mode			
★ Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2		Connect with coin changer		ON			
★ Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0		Connect with ICT JPSTD converter board		OFF			
★ Pulse Mode						ON		
Other Mode						OFF		
	Pulse Mode		Other Mode					
★ 1 pulse / H 1	MDB Mode						OFF	OFF
5 pulses / H 1	Reserved						OFF	ON
10 pulses / H 1	ICT104U Mode						ON	OFF
25 pulses / H 1	ICT104V Mode						ON	ON

This dip switch is located on the CPU board, remove the CPU board cover first.

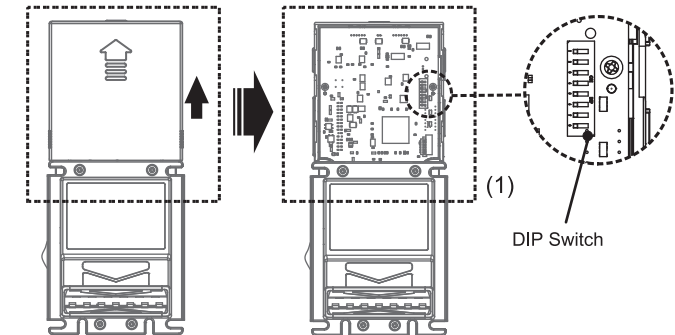

★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note : 1.Please reset the bill acceptor after set the dip switch.

2.Dip switches 1 to 5 are only used for pulse protocol.

3.Calibration card is needed.